User Manual	EN
Gebrauchsanweisung	DE

HKL 970SC

1630460

Contents

Safety Instructions **2**
Description of your oven **4**
Basic settings **6**
Basic functions **8**
Special Function **11**
Water feeding **16**
Emptying the water tank **16**
When the oven is working **17**
Use of Acessories **18**
Care and maintenance **27**
Oven Cleaning **30**
What should I do if the oven doesn't work? **31**
Technical characteristics **32**
Environmental protection **33**
Installation instructions **34**
Installation **68**

Dear Costumer:

Thank you for choosing this **TEKA** product.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using it.

KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

Always keep the instruction manual handy. If you lend the Steam oven to someone else give them the manual as well!
The user manual is also available for download at www.teka.com.

Safety Instructions

- **Warning!** Do not leave the oven unsupervised.
- **Warning!** If you see smoke or fire, keep the door closed in order to smother the flames. Switch off the oven and take the plug out of the socket or cut off the oven power supply.
- **WARNING: The appliance and its accessible parts become hot during use.**

  Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capa bilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**
- Children must be supervised to ensure that they do not play with the appliance. Use the safety locks.
- **Warning!** During use the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven. **RISK OF BURNS!**
- **Warning!** Accessible parts may become hot during use. Young children should be kept away.
- **Warning! When opening the door during or upon completion of the cooking cycle, be careful of the flow of hot air and/or steam and water drops coming out of the cooking chamber. Step back or to the side to avoid burns.**
- **Warning!** Make sure you never catch the power cables of other electrical appliances in the hot door or the oven. The cable insulation may melt. **Danger of short-circuiting!**

This oven is exclusively for domestic use!

The appliance is designed for use in the home for preparing food. No liability is assumed for any damage caused by improper or incorrect use.

Safety Instructions

Avoid damaging the oven or other dangerous situations by following these instructions:

- **Please cover the socket inside the oven as you are not using the food probe.** This will prevent possible damages**.**
- **Only use the recommended food probe for this oven.**
- This will prevent possible damages on the appliance
- Do not cover or obstruct the **ventilation openings**.
- Do not keep any **inflammable object** inside the oven as it may burn if the oven is switched on.
- Do not use the oven as a **pantry**.
- Do not pour spirits (e.g. brandy, whisky, schnapps, etc.) over hot food. Danger of explosion!
- Accessories such as wire racks and trays, etc. get hot in the cooking space. Always wear protective gloves or use oven cloths.
- **To avoid being burnt**, always use oven gloves for handling dishes and containers and touching the oven.
- **Do not lean or sit on the open oven door.** This may damage the oven, especially in the hinge zone. The door can bear a maximum weight of 8 kg.
- The racks can bear a maximum load of 8 kg. To avoid damaging the oven, do not exceed this load.

Cleaning:

- The appliance will remain hot for some time after it is switched off and cool down only slowly to room temperature. Please allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use high pressure or steam jet cleaning appliances.
- Please follow the instructions regarding cleaning in the section “Oven Cleaning and Maintenance”.

Repairs:

- If the power cable is damaged it should be substituted by the manufacturer, authorised agents or technicians qualified for this task in order to avoid dangerous situations. Furthermore, special tools are required for this task.
- Repair and maintenance work, especially of current carrying parts, can only be carried out by technicians authorized by the manufacturer.

Description of your oven

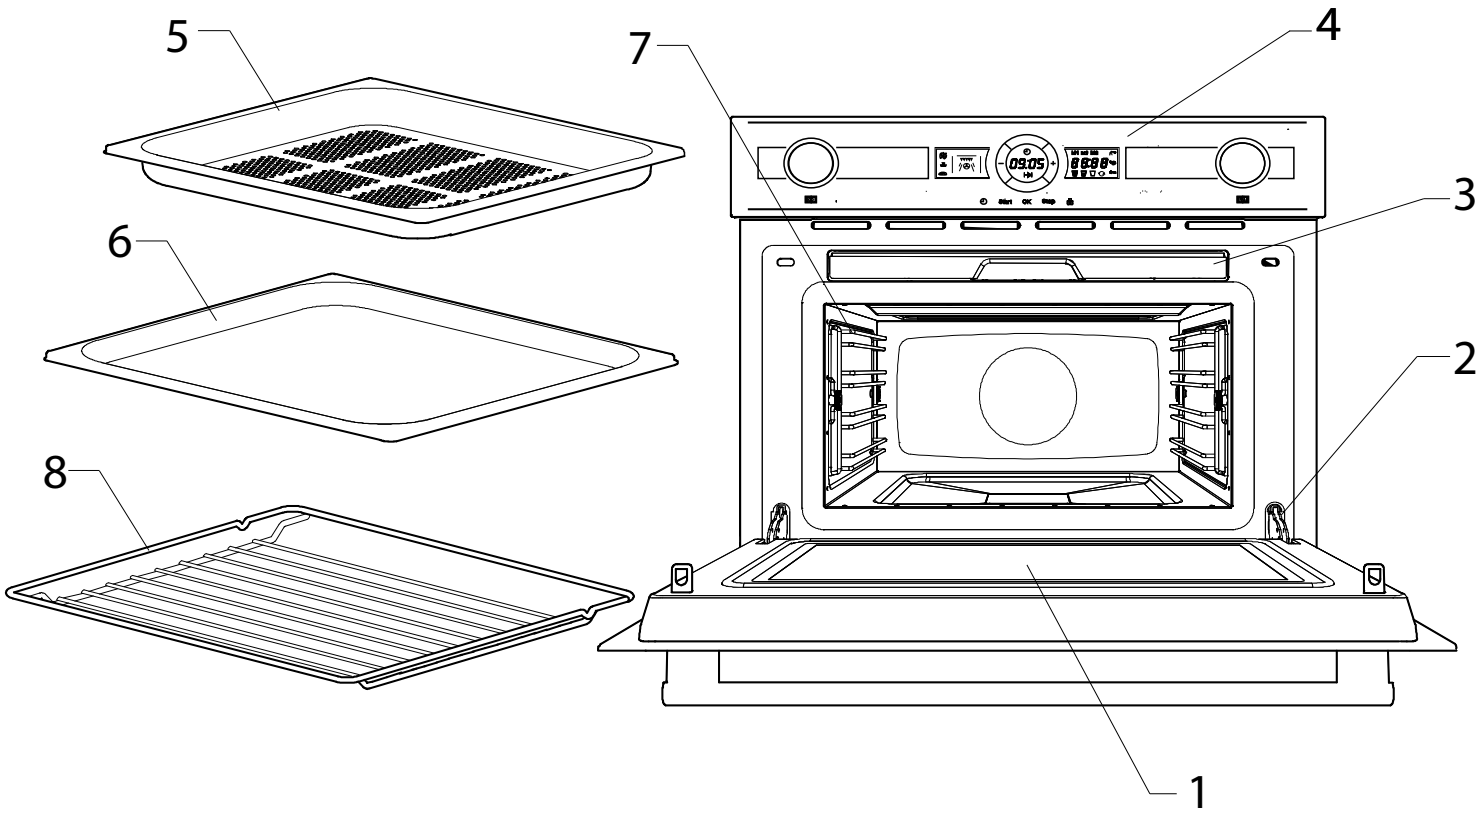

1. – Door window glass
2. – Safety catches
3. – Water tank
4. – Control panel
5. – Perforated baking tray
6. –Baking tray
7. – Shelf guides
8. – Rack
9. – Lamp bulb

Control Panel

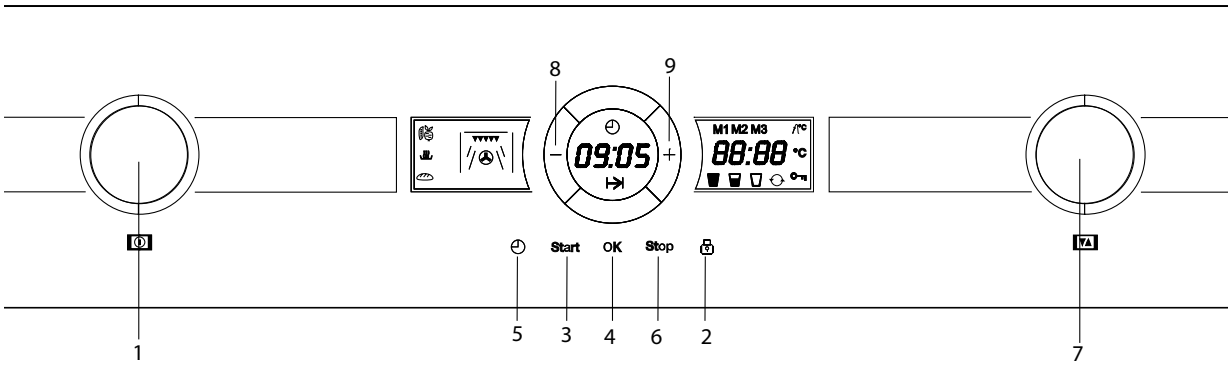

1. Function selection knob
2. Safety Block key
3. Start key
4. OK key
5. Clock key
6. Stop Key
7. Rotating Knob
8.”Minus” key
9. “Plus” key

Description of your oven

Description of Functions

Symbol	Function	Foods
	Steam	Cooking all sorts of vegetables, rice, cereals and meat. Extracting juice from berries. Simultaneous defrosting and cooking of vegetables.
	Regene rating & Sterilising	Regenerating plate dishes and ready-made meals. Sterilising/boiling down fruit.
	“Profi” Cooking	Fine pastry and cakes.
	Hot Air	Roasting and baking.
	Hot Air + Steam	Cooking meals with hot damp circulating air. Cooking potatoes, rice. Moist garnishing.
	Grill	Grilling meat and fish Grilling Potatoes – deep frozen, defrosting and roasting.
M1 M2 M3	Memory functions	
	Food Probe	
	Water Tank	Indicates that the Water Tank is Full
	Water Tank – Medium	Indicates that the Water tank has half of his capacity
	Water Tank	Indicates that the Water tank is empty
	Descalling function	

Basic settings

Setting the clock

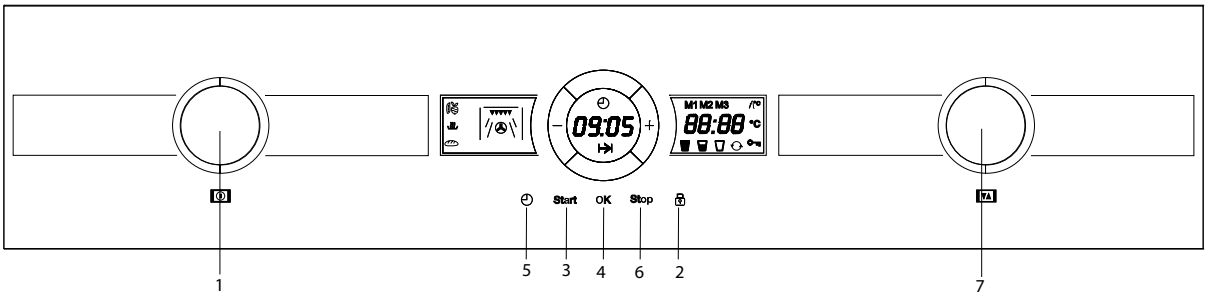

After your microwave oven is first plugged in or after a power failure, the clock display will flash to indicate that the time shown is not correct. To set the clock, proceed as follows:

1. Press the Clock key (5) when the Clock/Duration display is showing the clock. The hour numbers will start to flash.
2. Press the “+” and “-” keys to set the correct hour value.
3. Press again the Clock key (5) to set the minutes. The minute numbers will start to flash.
4. Press the “+” and “-” keys to set the correct minute value.
5. To finish, press the Clock key (5) again.

Water Hardness setting

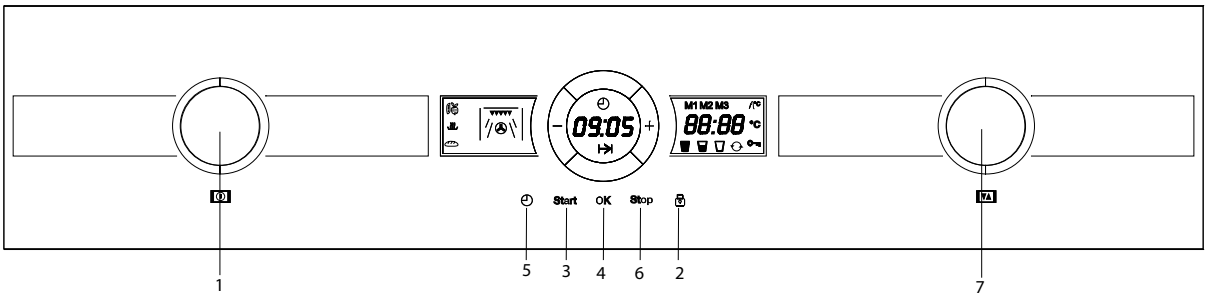

The appliance features a system that automatically indicates when it is time to descale.

The system can be optimized for households with very soft water (also through using a water softening appliance) and very hard water, by changing the user settings to the relevant range of water hardness (see table below).

To set the water hardness parameter, proceed as follows:

1. Press the “+” and “-” keys to set the Water Hardness. Select the desired water hardness according to the below table. The selected parameter will start to flash on the display (steps 1 is not necessary if the appliance is first plugged in or after a power failure).
2. Press the **“OK”** key (4) to set the parameter. The oven returns to the “ON” state.

Basic settings

Type	Water hardness				Display
	Ca + Mg (ppm)	English deg. [°eH]	French deg. [°dF]	German deg. [°dH]	
Soft water	0 to 150	0 to 11	0 to 15	0 to 8	1
Medium water	151 to 350	12 to 25	16 to 35	9 to 20	2
Hard water	501 to 500	26 to 35	36 to 50	21 to 28	3

Hiding/Displaying the Clock

If the clock display disturbs you, you can hide it by pressing the Clock key for 3 seconds. The dots that separate the hours and minutes will flash but the rest of the clock display will be hidden.

If you want to see the clock display again, press the Clock key again for 3 seconds.

Safety blocking

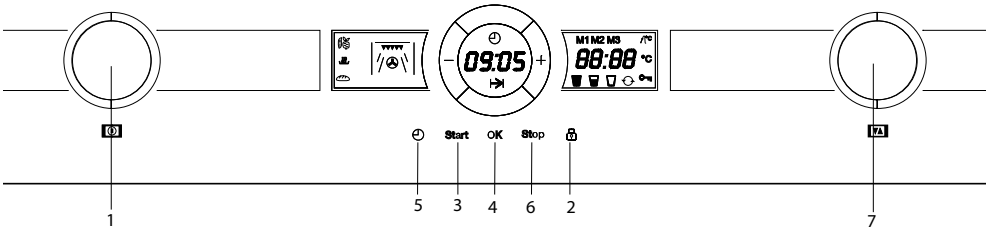

The oven operation can be blocked (for example, to stop it from being used by children).

1. To block the oven, press the Safety Block key (2) for 3 seconds. You will hear a sound signal and Safety Block indicator will illuminate. The oven is blocked in this state and cannot be used.
2. To unblock the oven, press the Safety Block key (2) again for 3 seconds. You will hear a sound signal and the Safety Block indicator will turn off.

Show-Room Mode

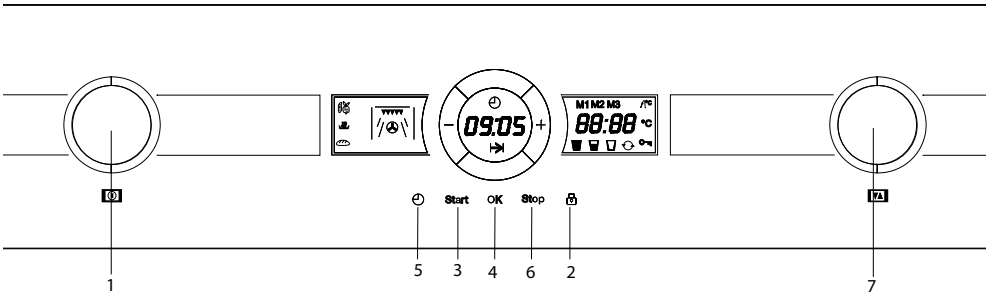

1. Press simultaneously the Clock (5) and Safety Block (2) keys for approximately 5 seconds.

The Clock/Duration Value shows the message "dEmo". The Weight/Power/Temperature Value shows the message "OFF" blinking (showing the actual status).

To return to the normal mode, repeat step 1.

Basic functions

Steam function

Use this function to cook all sorts of vegetables, rice, cereals and meat. It is also suitable for extracting juice from berries and for simultaneous defrosting and cooking of vegetables.

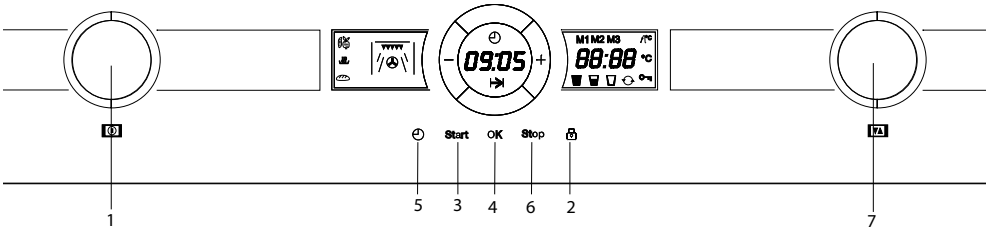

1. Turn the Function Selector knob (1) until the Steam function function indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the duration.
3. Press the OK key (4) to validate. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
4. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
5. Press the OK key (4) to validate.
6. Press the Start key (3). The oven will start to operate.

Hot-Air

Use this function to bake food.

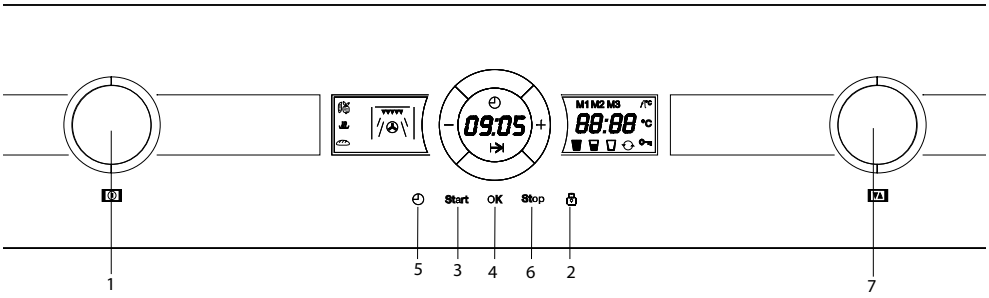

1. Turn the Function Selector knob (1) until the Hot-Air function indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the duration.
3. Press the OK key (4) to validate. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
4. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
5. Press the OK key (4) to validate.
6. Press the Start key (3). The oven will start to operate.

Basic Functions

Steam + Hot Air function

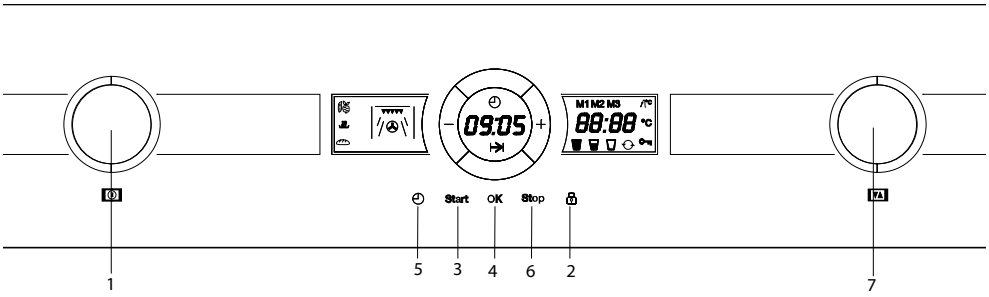

1. Turn the Function Selector knob (1) until the Steam + Hot Air function function indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the duration.
3. Press the OK key (4) to validate. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
4. The temperature value flashes. Turn the Rotating knob (7) in either direction to set the temperature.
5. Press the OK key (4) to validate.
6. Press the Start key (3). The oven will start to operate.

Grill

Use this function to brown the top of food quickly.

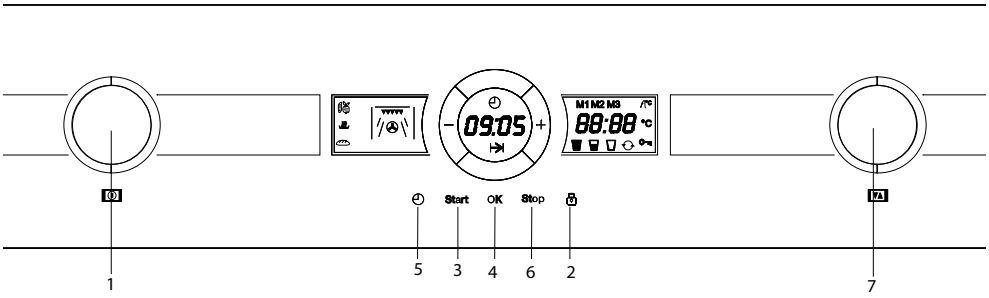

1. Turn the Function Selector knob (1) until the Grill function indicator flashes. The Duration display shows 15:00 flashing.
2. Turn the Rotating knob (7) in either direction to set the duration.
3. Press the OK key (4) to validate.
4. Press the Start key (3). The oven will start to operate.

Basic Functions

Grill + Hot Air function

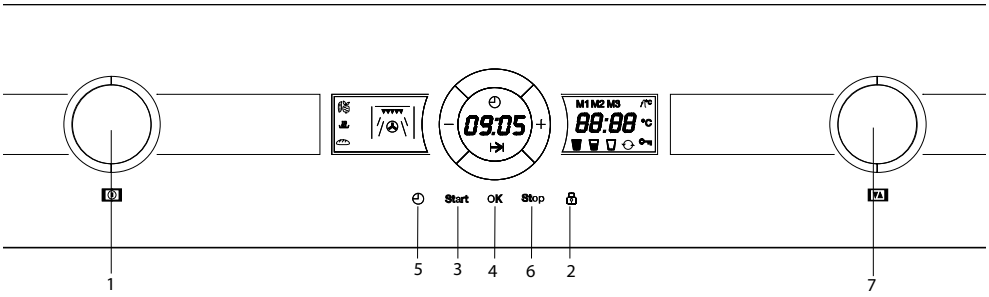

1. Turn the Function Selector knob (1) until the Grill + Hot Air function function indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the duration.
3. Press the Start key (3). The oven will start to operate.

Special Function

Auto Cooking function A

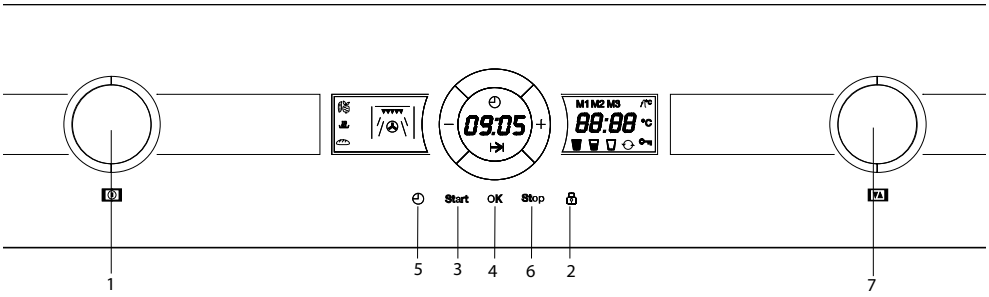

1. Turn the Function Selector knob (1) until the Auto Cooking function A indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the desired function.
3. Press the OK key (4) to validate. Turn the Rotating knob (7) to select the desired sub function (A1.1, A1.2…). See teable below.
4. Press the Start key (3). The oven will start to operate.

The following table show the 3 available functions, their programs, temperatures and cooking time.

Function	Program	Temperature (°C)	Duration (min.)
Fruit			
A1	A1.1	100	20
	A1.2	100	25
	A1.3	100	15
Fish			
A2	A2.1	80	25
	A2.2	90	15
	A2.3	80	18
Side Dishes			
A3	A3.1	100	20
	A3.2	100	25
	A3.3	100	30

Special Function

Auto Cooking function B

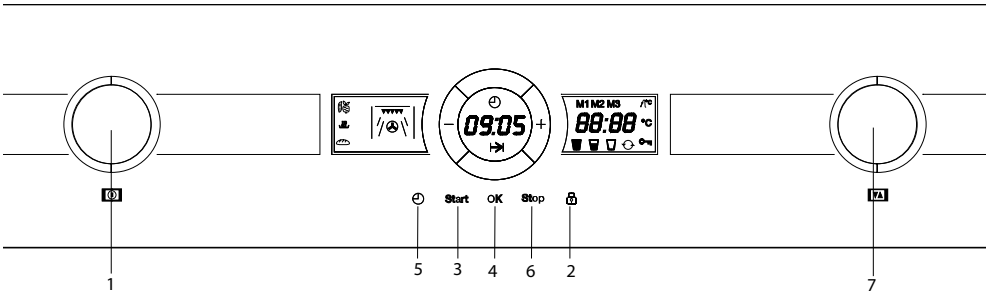

1. Turn the Function Selector knob (1) until the Auto Cooking function B indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the desired function.
3. Press the OK key (4) to validate. Turn the Rotating knob (7) to select the desired sub function (B1.1, B1.2…). See teable below.
4. Press the Start key (3). The oven will start to operate.

The following table show the 3 available functions, temperatures and cooking time.

Function		Defaults		Adjusts			
		Temperature (°C)	Duration (min.)	Temperature (°C)		Duration	
				Min.	Máx.	Min.	Máx.
Steam + Hot Air	B1	110	13	100	140	5 min.	45 min.
Steam	B2	100	35	Default		0	9h50
	B3	80	35	Default		0	9h50

Special Function

Auto Cooking function C

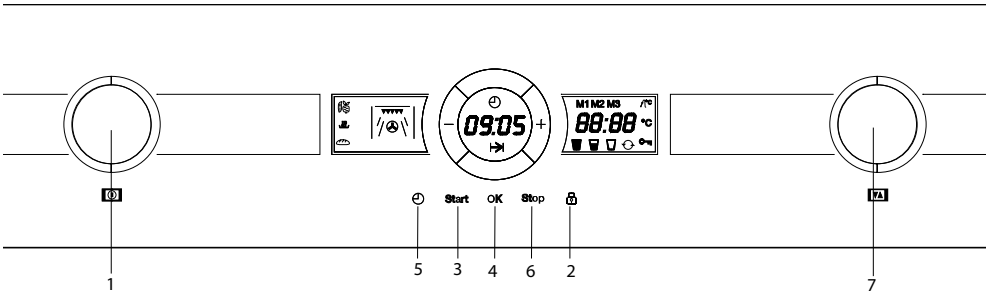

1. Turn the Function Selector knob (1) until the Auto Cooking function C indicator flashes.
2. Turn the Rotating knob (7) in either direction to set the desired function.
3. Press the OK key (4) to validate. Turn the Rotating knob (7) to select the desired sub function (C1.1, C1.2…). See teable below.
4. Press the Start key (3). The oven will start to operate.

Function		Program	Temperature (ºC)	Duration (min.)
Bread				
Backing Buns	C1	C1.1	200	15
Frozen Buns		C1.2	200	20
Fresh Dough		C1.3	180	25
White Bread		C1.4	190	50
Braided Bread		C1.5	200	40
Gratin/Pizza				
Gratin, Fresh	C2	C2.1	160	60
Gratin, Precooked		C2.2	160	50
Casserole, Fresh		C2.3	180	35
Casserole, Precooked		C2.4	180	30
Fresh Pizza		C2.5	220	25
Frozen Pizza		C2.6	220	35

Memory Functions

Memory Functions (M1 – M3)

This function is intended to store three separated settings that can be saved and called.

Store a memory

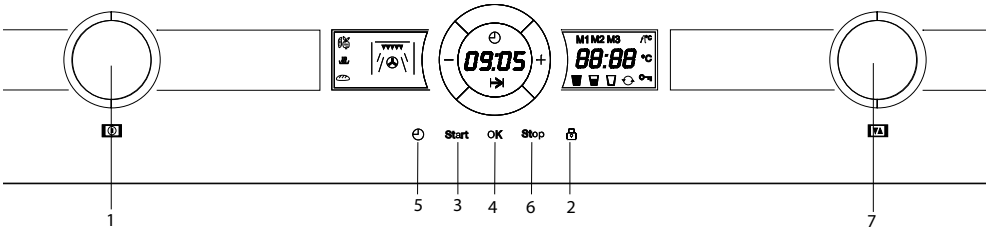

1. Turn the Function Selector knob (1) and select the desired function.
2. Turn the Rotating knob (7) to set the desired parameters for the selected function.
3. Press the Clock key (5) for 5 seconds. After the 5 seconds the M1 indicator starts blinking.
4. Turn the Rotating knob (7) to navigate the menu and to chose one of the available memories M1 – M3.
5. Press the **"OK"** key (4) to validate.

Selecting a stored memory

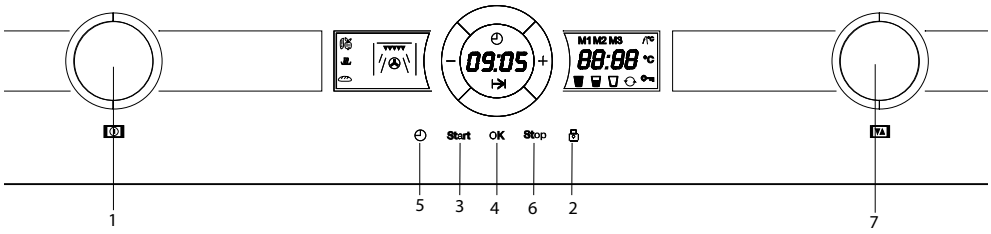

To use one of the stored memories proceed as follow:

1. Turn the Function Selector knob (1) to select the stored memory (M1-M3).
2. Press the "start key (3).

Delete a memory

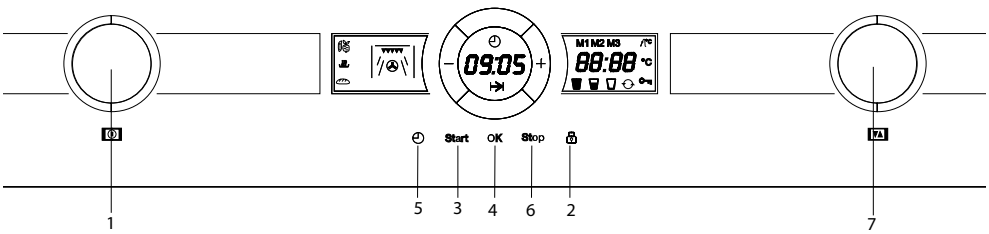

To delete a memory proceed as follows with the oven in standby mode:

1. Turn the Function Selector knob (1) to select the stored memory (M1-M3).
2. Press the Clock key (5) for approximately 3 seconds.
3. The right display shows the word **"dEL".**

Food Probe

The food probe measures the inner temperature of the food being cooked and ends the active function when a selected temperature is reached

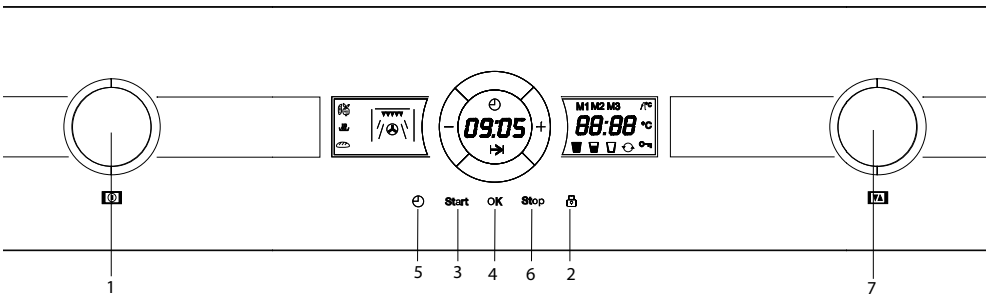

1. Insert the Food Probe into the socket inside the oven's cavity.
2. The Meat Probe indicator blinks and the Temperature Value display will show the default meat probe temperature blinking.
3. Turn the Rotating knob (7) to chose a new temperature.
4. Press the **"OK"** key (4) to validate the set temperature.
5. Press the "start key (3).

<u>Warning!</u> Please cover the socket inside the cavity if you are not using the food probe. This will prevent possible damages on the appliance.

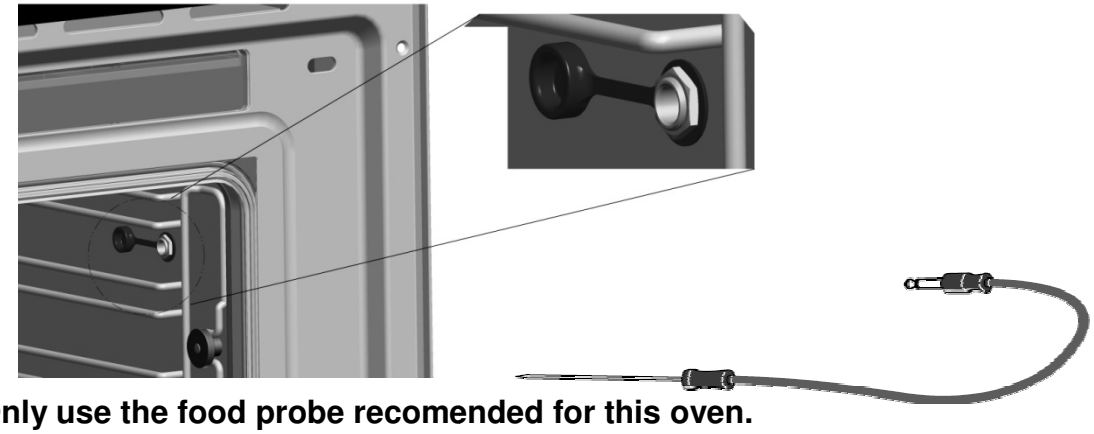

Only use the food probe recomended for this oven.

Water feeding

Filling the water tank

All functions require the water tank to be full.

Fill the water tank up to the “MAX” mark with cold, fresh drinking water and introduce it into the slot located above the cavity (approximately 1L).

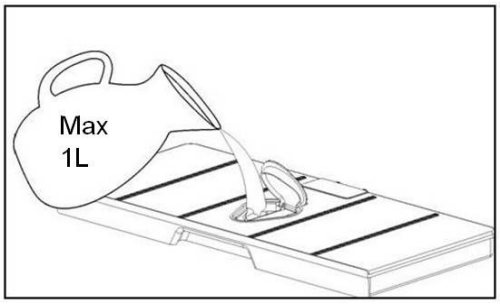

Refilling the water

The contents of the water tank normally suffice for one cooking session of 50-60 minutes.

If, however, the water tank needs to be refilled this is signalled by the message meaning that the water tank is empty.

Warning! Only fill the water tank up to a maximum of 0.5 litres to ensure that the water does not overflow when it is pumped back to the water tank. RISK OF OVERFLOW.

Emptying the water tank

When the appliance is switched off, the residual water is pumped back into the water tank.

While the water is being pumped the display shows “PUMP”.

This message stays on until the temperature of the water reaches 75º C before it can be pumped back to the water tank.

Warning: the water in the tank may be hot. Danger of burns!

After the water is pumped back to the water tank, the display will show the message “DEP” requiring the following actions:

1. Remove and empty the water tank.
2. Dry the water tank and introduce it back into the slot located above the cavity. Clean and dry the cooking space.
3. Leave the appliance door open so that the cooking space can cool down and dry completely.

IMPORTANT NOTE: It is advisable to remove the water tank and empty it after a cooking cycle. This prevents the formation of bacteria and limestone inside the appliance.

If the water tank has not been removed from the oven and a new cooking cycle is started, the oven displays the warning “**DEP**”.

This warning can be cleared by pressing the **Stop** key and proceed with the new cooking cycle without removing and emptying the water tank.

When the oven is working...

Interrupting a cooking cycle

You can stop the cooking process at any time by pressing the **Stop** key once.

The oven incorporates a steam-reduction function that is activated when the **Stop** key is pressed to gradually release the steam from the cavity, so that there is no sudden rush of steam when the appliance door is opened.

This function takes around 3 minutes and during it the display shows the word “VAP”.

Warning! When opening the door during or upon completion of the cooking cycle, be careful of the flow of hot air and/or steam coming out of the cooking chamber. Step back or to the side to avoid burns.

At this point:

- The steam generation is interrupted.
- The cavity walls and the water tank are still very hot**. Danger of burning!**
- The timer stops and the display shows the remaining operating time (if this has been set).

If you wish, at this point you can:

1. Turn or stir the food to ensure it will be evenly cooked.
2. Change the cooking parameters.

To restart the process, close the door and press the **Start** key.

Altering parameters

The operating parameters (time and temperature) can be altered when the oven is operating or when the cooking process has been interrupted by proceeding as follows:

1. To alter the time, press “**+**” and “**–**” keys. The new time defined is immediately valid.
2. To alter the temperature, press the Temperature Selection key and the display and respective light start to flash. Alter the parameter by pressing the “**+**” and “**–**” keys and confirm by pressing the Temperature Selection key again.

Cancelling a cooking cycle

If you wish to cancel the cooking process, press the **Stop** key twice.

You will then hear 3 beeps and the message “End” will appear on the **display**.

End of a cooking cycle

At the end of the set duration or when you press the **Stop** key to finish the cooking cycle the oven starts the steam-reduction function.

This function gradually releases the steam from the cavity, so that there is no sudden rush of steam when the appliance door is opened.

This function takes around 3 minutes and during it the display shows the word “**VAP**”.

At the end of this process you will hear three beeps and the display will show the word “**End**”.

Warning! When opening the door during or upon completion of the cooking cycle, be careful of the flow of hot air and/or steam coming out of the cooking chamber. Step back or to the side to avoid burns.

The beeps are repeated every 30 seconds until the door is opened or the **Stop** key is pressed.

The cooling fan can continue to run for a certain length of time after the appliance has been switched off. This is a normal function that is meant to reduce the temperature inside the oven.

When the display shows the word “DEP”, this means that the water was pumped and that the water tank can be removed.

Remove the water tank and dry it thoroughly. Let the cooking space cool down for a moment and then clean and dry it with a cloth. The door should be left open for some time so that the appliance can dry completely.

Residual water in the oven

To reduce the residual water in the oven, it is recommended to insert a tray in the bottom rack level. The condensation released from the food begins to drip, reducing the residual water in the appliance. The remaining residual water can be easily dried with a cloth.

Use of Acessories

The perforated container is suitable for cooking fresh or deep frozen vegetables, meat and poultry. In this case it is important that the non-perforated container is introduced into the first level. This way, dripping liquids are collected and the appliance does not get dirty. The perforated container with the food should be inserted into the second level.

The non-perforated container is used to steam sensitive foods, e.g. compotes and dumplings.

The rack is used when cooking with small containers, as for example, dessert bowls and to regenerate plate dishes.

For more precise information refer to the tables.

The suggested times and temperatures are guideline values. The actual cooking time can vary according to the type and quality of the foods.

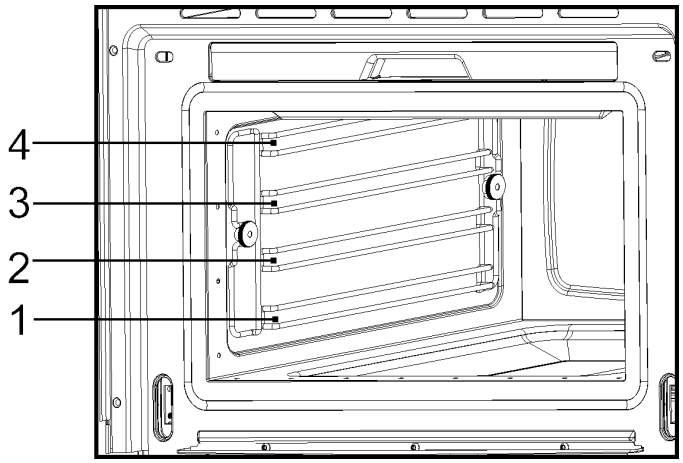

To remove the rack, lift it upwards slightly at the front when the safety notches connect with the sides of the oven (see illustration).

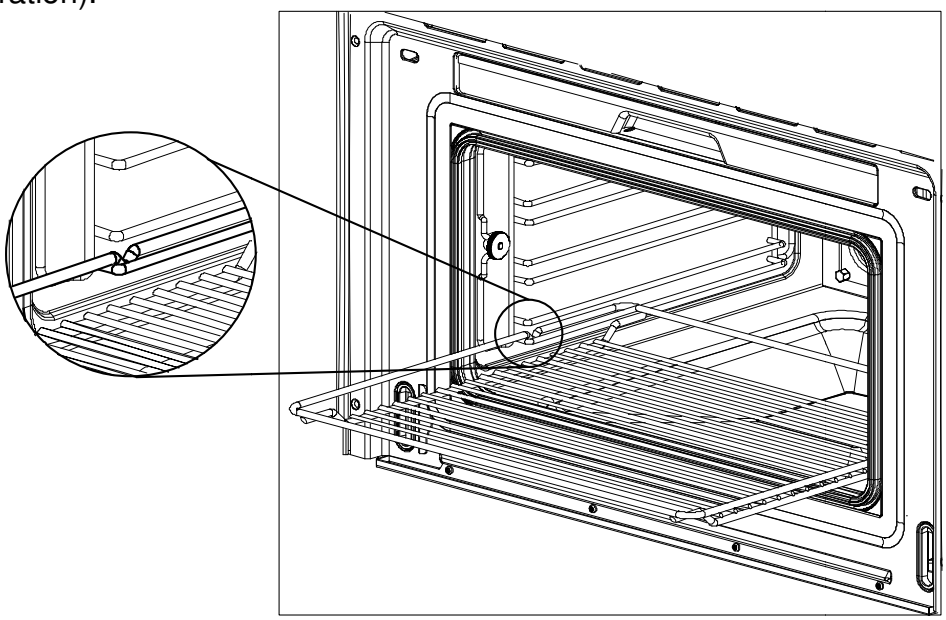

We recommend using the rack together with the baking tray when cooking items on the rack which might drip.

Cooking with Steam

Steam cooking - Fish

Fish	Quantity	Temperature ºC	Time min.	Container	Level
Gilthead sea bream	800-1200 g	80	30-40	Perforated	2
Trout	4 x 250 g	80	20-25	Perforated	2
Salmon filet	500-1000 g	80	15-25	Perforated	2
Salmon trout	1000-1200 g	80	25-35	Perforated	1/2
King prawns	500-1000 g	80	15-20	Perforated	2
Green-shell mussel	1000-1500 g	100	25-35	Perforated	2
Halibut filet	500-1000 g	80	20-25	Perforated	2
Cockles	500-1000 g	100	10-20	Perforated	2
Lobster	800-1200 g	100	25-30	Perforated	1/2
Cod filet	1000-1200 g	80	20-25	Perforated	2
Blue mussel	1000-1200 g	100	15-25	Perforated	2
Lake trout	4 x 250 g	80	25-30	Perforated	2
Haddock	1000-1200 g	80	20-25	Perforated	2
Tuna filet	500-1000 g	80	15-20	Perforated	2
Pike perch	4 x 250 g	80	25-30	Perforated	2

Cooking with Steam

Steam cooking - Meat

Meat	Quantity	Temperature ºC	Time min.	Container	Level
Chicken leg	4-10	100	40-45	Perforated	2
Chicken breast	4-6	100	25-35	Perforated	2
Smoked pork loin	500g – 1000 g	100	40-50	Perforated	2
Turkey escalope	4-8	100	20-25	Perforated	2
Pork filet, whole	4-8	100	20-30	Perforated	2
Sausages		80-100	10-15	Perforated	2

Steam cooking - Eggs

Eggs	Temperature ºC	Time min.	Container	Level
Eggs in Glass	100	10-15	Rack	2
Eggs, hard	100	15	Rack	2
Eggs, soft	100	10-12	Rack	2

Steam cooking - Side dishes

Side dishes	Quantity	Temperature ºC	Time min.	Container	Level
Pearl barley + Liquid	200g + 400 ml	100	30-35	Rack, glass bowl	2
Semolina + Liquid	200g + 300 ml	100	10-20	Rack, glass bowl	2
Lentils + Liquid	200g + 375 ml	100	20-50	Rack, glass bowl	2
Rice + Liquid	200g + 250 ml	100	25-40	Rack, glass bowl	2

Cooking with Steam

Steam cooking - Vegetables

Vegetables		Temperature ºC	Time min.	Container	Level
Eggplant/Aubergine	in slices	100	15-20	Perforated	2
Beans		100	35-45	Perforated	2
Broccoli	florets with stalk	100	25-30	Perforated	2
Broccoli	florets without stalk	100	15-20	Perforated	2
Cauliflower	florets	100	25-30	Perforated	2
Cauliflower	whole head	100	40-45	Perforated	1
Peas		100	30-35	Perforated	2
Fennel	in stripes	100	15-20	Perforated	2
Fennel	cut in half	100	20-30	Perforated	2
Potatoes with skin	whole, very small	100	20-25	Perforated	2
Potatoes with skin	whole, very big	100	45-50	Perforated	2
Potatoes without skin	in pieces	100	20-25	Perforated	2
Turnip	in sticks	100	20-25	Perforated	2
Snow peas		100	15-20	Perforated	2
Carrots	in slices	100	25-30	Perforated	2
Corn cobs		100	50-60	Perforated	2
Bell peppers	in stripes	100	12-15	Perforated	2
Hot pepper		100	12-15	Perforated	2
Mushrooms	in quarters	100	12-15	Perforated	2
Leeks	in slices	100	10-12	Perforated	2
Brussels sprouts		100	25-35	Perforated	2
Celery	in stripes	100	15-20	Perforated	2
Asparagus		100	20-35	Perforated	2
Spinach		100	12-15	Perforated	2
Celery stalks		100	25-30	Perforated	2
Courgette	in slices	100	12-18	Perforated	2

Steam cooking - Dumplings

Dumplings	Temperature ºC	Time min.	Container	Level
Sweet dumpling	100	20-30	Not perforated	2
Sweet yeast dumpling	100	15-20	Not perforated	2
Yeast dumpling	100	15-25	Not perforated	2
Bread dumpling	100	20-25	Not perforated	2
Napkin dumpling	100	25-30	Not perforated	2

Cooking with Steam

Steam cooking - Desserts

Desserts	Quantity	Temperature ºC	Time min.	Container	Level
Stewed apples	500-1500 g	100	15-25	Not perforated	2
Stewed pears	500-1500 g	100	25-30	Not perforated	2
Crème brûlée		80	20-25	Rack - bowl	2
Crème caramel		80	25-30	Rack - bowl	2
Yogurt		40	4-6 hrs.	Rack - bowl	2
Stewed peaches	500-1500 g	100	15-20	Not perforated	2

Steam cooking - Fruit (Sterilising/Boiling down)

Fruit	Quantity	Temperature ºC	Time min.	Container	Level
Pears	4-6 1l glasses	100	30-35	Rack	1
Cherries	4-6 1l glasses	80	30-35	Rack	1
Peaches	4-6 1l glasses	80	30-35	Rack	1
Plums	4-6 1l glasses	80	30-35	Rack	1

Steam cooking - Regenerate

Warming-up	Quantity	Temperature ºC	Time min.	Container	Level
Plate dishes	1-2	100	12-15	Rack	2
Plate dishes	3-4	100	15-20	Rack	2
Ready-made meals		100	15-20	Rack	2

Steam cooking - Blanch

Vegetables	Quantity	Temperature ºC	Time min.	Container	Level
e.g. Beans, Leek		100	10-12	Perforated	2
Curly Kale	1000-2000 g	100	12-16	Perforated	2
Savoy cabbage	10-20	100	12-15	Perforated	2
White cabbage, whole	2000-2500 g	100	30-45	Perforated	1
Tomatoes, peeled		80	12	Rack	2

Cooking with Steam

Steam cooking - Defrost

Vegetables / Side dish		Temperature ºC	Time min.	Container	Level
Broccoli	florets with stalk	100	15-20	Perforated	2
Mixed vegetables		100	15-20	Perforated	2
Spinach leaves	portions	100	10-15	Not perforated	2
Cauliflower	florets	100	15-20	Perforated	2
Peas		100	15-25	Perforated	2
Curly kale	bigger portion	100	25-35	Not perforated	2
Carrots	in slices	100	15-20	Perforated	2
Brussels sprouts		100	20-25	Perforated	2
Asparagus		100	25-30	Perforated	2
Ready-made meals		100	as required	Rack	2
Bread		100	10-25	Rack	2
Rice		100	15-25	Not perforated	2
Lentils		100	15-20	Not perforated	2
Noodles		100	15-20	Not perforated	2

Two level cooking

Some suggestions:

When cooking with two levels the grill always belongs to the 2nd or 3rd level of insertion from the bottom to the top.

This way the usual vessels of porcelain, Jena glass or of stainless steel can be put inside the oven.

The container of cooking perforated or not, will be inserted in the 1st level from the bottom. It can also be cooked with two grills.

Different cooking times are controlled this way:

Foods that need a longer cooking time should be placed in the upper area of the oven. Foods with a shorter cooking time should be placed on the 1st level.

One example: Vegetables, potatoes and fish.

Place the vegetables and potatoes in any suitable container on the rack inserted in the 2nd or 3rd level.

Insert the fish in the 1st level.

When using the perforated tray to cook fish, the non-perforated tray must be inserted in the bottom of the appliance to collect liquid dripping from the fish. This way the appliance is kept clean.

Time: Vegetables and potatoes 25-35 Min.

Time: Fish – depending on type – 15-25 Min.

Select the longest cooking time. Because of the different levels the food is ready at the same time, without any over cooking.

Cooking with the grill

For good results with the grill, use the grid iron supplied with the oven.

Fit the grid iron in such a way that it doesn't come into contact with the metal surfaces of the oven cavity since if it does there is a danger of electric arcing which may damage the oven.

IMPORTANT POINTS:

1. When the grill is used for the first time there will be some smoke and a smell coming from the oils used during oven manufacture.
2. The oven door window becomes very hot when the grill is working. **Keep children away.**
3. When the grill is operating, the cavity walls and the grid iron become very hot. You should use oven gloves.
4. If the grill is used for extended period of time it is normal to find that the elements will switch themselves off temporarily due to the safety thermostat.
5. **Important!** When food is to be grilled or cooked in containers you must check that the container in question is suitable for use. See the section on types of ovenware!
6. When the grill is used it is possible that some splashes of fat may go onto the elements and be burnt. This is a normal situation and does not mean there is any kind of operating fault.
7. After you have finished cooking, clean the interior and the accessories so that cooking remains do not become encrusted.

Type of food	Quantity (g)	Time (min.)	Instructions
Fish			
Bass Sardines/gurnard	800 6-8 fish.	18-24 15-20	Spread lightly with butter. After half of cooking time turn and spread with seasoning.
Meat			
Sausages	6-8 units	22-26	Prick after half cooking time and turn.
Frozen hamburgers	3 units	18-20	
Spare rib (approx. 3 cm thick)	400	25-30	After half of cooking time, baste and turn.
Others			
Toast	4 units	1½-3	Watch toasting.
Toasted sandwiches	2 units	5-10	Watch toasting.

Heat up the grill beforehand for 2 minutes. Unless indicated otherwise, use the grid iron. Place the grid on a bowl so that the water and the fat can drop. The times shown are merely indicative and can vary as a function of the composition and quantity of the food, as well as the final condition wished for. Fish and meat taste great if, before grilling, you brush them with vegetable oil, spices and herbs and leave to marinate for a few hours. Only add salt after grilling.

Sausages will not burst if you prick them with a fork before grilling.

After half the grilling time has passed, check on how the cooking is going and, if necessary, turn the food over.

The grill is especially suitable for cooking thin portions of meat and fish. Thin portions of meat only need to be turned once, but thicker portions should be turned several times.

Cooking with Hot Air

Roasting and baking

Type	Quantity (g)	Power (Watt)	Temperature ºC	Time (min)	Standing Time (min)	Comments
Beef stew	1000	200	160/170	80/90	10	Do not put lid on container
Pork loin	500/600	200	180/190	35/40	10	Do not put lid on container
Whole chicken	100/1200	400	200	30/40	10	Put lid on container. Breast facing upwards. Do not turn.
Chicken portions	800	400	200	25/35	10	Do not put lid on container. Arrange portions with skin facing upwards. Do not turn.
Duck	1500/1700	200	200	70/80	10	Put lid on container. Do not turn.

Advice for roasting meat

Turn the pieces of meat halfway through the cooking time. When the roasted meat is ready you should let it stand for 10 minutes in the oven with this switched off and closed. This will ensure the juices in the meat are well distributed.

Add 2 to 3 soup spoons of gravy or similar liquid to lean meat and 8 to 10 soup spoons to stews, depending on the amount of meat in question.

The roasting temperature and time required depends on the type and amount of meat being cooked.

If the weight of the meat to be roasted does not appear on the table choose the settings for the weight immediately below and extend the cooking times.

Advice on ovenware

Check that the ovenware fits inside the oven.

Hot glass containers should be put on a dry kitchen cloth. If such containers are put on a cold or wet surface the glass may crack and break. Use oven gloves to take the ovenware out of the oven.

Cooking with Hot Air

Cooking – Cakes

Type	Container	Level	Temperature	Time (min)
Walnut cake	Spring-form type tin	1	170/180	30/35
Fruit tart	Spring-form type tin	2	150/160	35/45
Fruit cakes	Cake tin with central hole	1	170/190	30/45
Savoury tarts	Spring-form type tin	2	160/180	50/70
Simple cake (sponge cake)	Spring-form type tin	1	160/170	40/45
Almond cakes	Cake tray	2	110	35/45
Puff pastry	Cake tray	2	170/180	35/45

Advice on cake baking ware

The most commonly used type of baking ware is black metal tins.

Advice on how to bake cakes

Different amounts and types of pastry require different temperatures and baking times. Try low settings first of all and then, if necessary, use higher temperatures next time. A lower temperature will result in more uniform baking. Always put the cake tray in the centre of the turntable.

Baking suggestions

How to check if the cake is properly cooked

Start sticking a tooth pick in the highest part of the cake 10 minutes before the end of the baking time. When no dough sticks to the tooth pick the cake is ready.

If the cake is very dark on the outside

Next time choose a lower temperature and let the cake bake for a longer time.

If the cake is very dry

Make small holes in the cake with a tooth pick after baking has finished. Then sprinkle the cake with some fruit juice or alcoholic drink. Next time increase the temperature by about 10º and reduce the baking time.

If the cake does not come free when turned
Let the cake cool down for 5 to 10 minutes after baking and it will come out of the tin more easily. If the cake still does not come free run a knife carefully around the edges. Next time grease the cake tin well.

Care and maintenance

Cleaning the cooking space

Avoid using abrasive cleaners such as scouring pads, steel wool, etc. as they can damage the surface.

Wipe the cooking space clean using a damp cloth whilst the appliance is still warm. Finish off by drying the cooking space.

For ease of cleaning, the shelf guides can be removed (see the following chapter).

Removing the shelf guides

Unscrew and remove the knurled nuts 1 in the front of the shelf guides in an anti-clockwise direction.

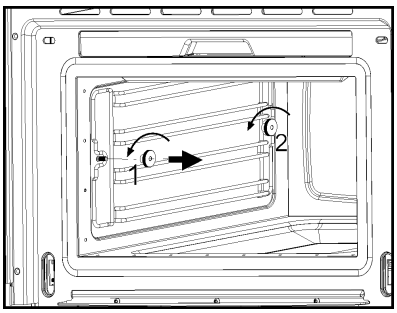

Unscrew and loosen the knurled nuts 2 in the back of the shelf guides in an anti-clockwise direction. Do not completely remove these nuts.

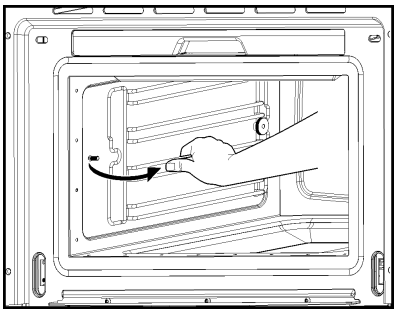

Pull the shelf guides to the inside of the cavity and remove from the front.

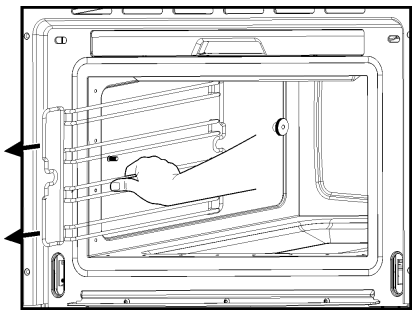

To put them back, insert the shelf guides into the knurled nuts 2 in the back and position on the screws in the front. Screw the knurled nuts 1 and 2 in a clockwise direction till tight.

Removing the appliance door

1. Open the appliance door as far as it will go.

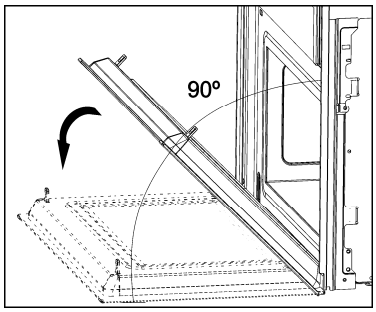

2. Insert 2 pins inside the holes in the hinges.

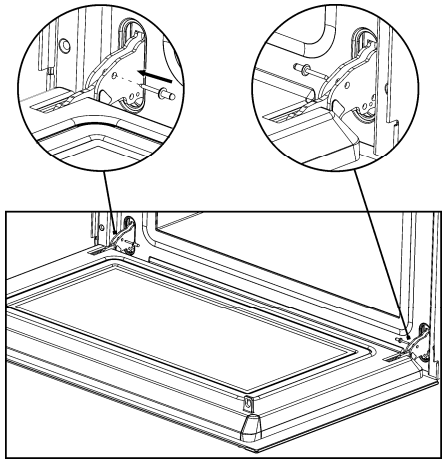

3. Close the appliance door just enough that it can be lifted out.

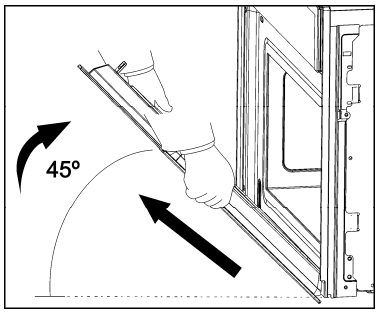

4. To reassemble, push the hinges into the holes from the front.

5. Open the appliance door as far as it will go and remove the pins.

Care and maintenance

Descaling

Whenever steam is produced, irrespective of the hardness of the local water supply (i.e. the limescale content of the water), limescale is deposited inside the steam generator.

The time interval between descaling depends on the hardness of the water and frequency of use. If steaming 4×30 minutes per week, the appliance must be descaled (depending on water hardness) roughly as follows:

Water hardness	Descale after about
Very soft	18 months
Medium	9 months
Very hard	6 months

The appliance automatically detects when descaling is necessary and when this happens the Descale light stays on. If the Descaling procedure is not performed, some cooking cycles after the Descale light starts to flash. If once again the Descaling procedure is not performed, some cooking cycles after the oven functioning is blocked, the Descale light stays on and the display shows “CAL” blinking.

IMPORTANT NOTE: Failure to descale the appliance will likely impair the functioning of or cause damage to the appliance.

Suitable descaling solutions

For descaling, use the descaling solution **“durgol”**.

This solution allows a professional and careful descaling of your appliance. Available at Customer Care Centres.

Warning! Do not use vinegar or vinegar-based products as they can cause damage to the oven’s internal circuit.

Traditional descaling solutions are not appropriate because they can contain foaming agents.

Care and maintenance

Descaling procedure

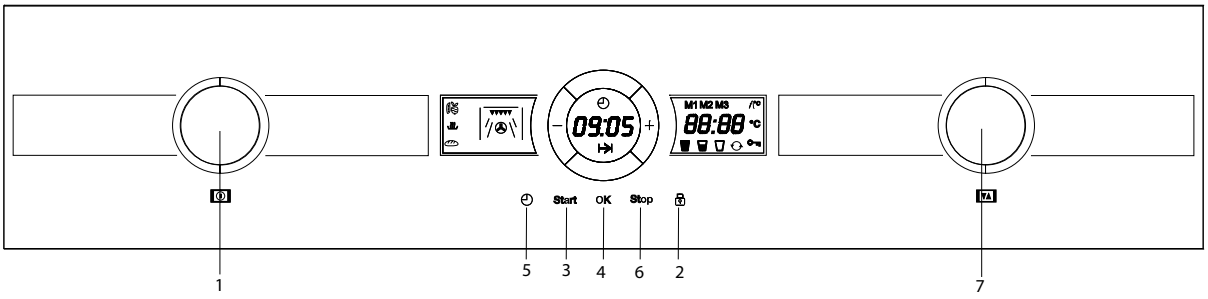

Warning: For safety reasons, the descaling process cannot be interrupted and it takes about 45 minutes.

The appliance can be descaled with the appliance door open or closed. The appliance must be in idle state prior to starting the descaling cycle.

To run a descaling cycle proceed as follows:

1. Press the "**-**" and "**+**" keys at the same time for 5 seconds. The display shows "**CAL**" and there is an intermittent beep. If you wish to cancel the descale process at this stage Press the "Stop" (6) key.
2. Press the **"Start"** key (3) to start the descaling function.
3. When the display shows "**0.5L**", Short beeps are emitted. Remove the water tank.
4. Pour 0,5 litres of an adequate descaling solution into the water tank and put the water tank back.
5. Press the **"Start"** key (3). The Descale cycle is initiated and takes about 30 minutes.
6. When the display shows "**1.0L**" flashing and the oven emits a beep, remove and empty the water tank.
7. Fill the water tank with 1,0 litres of cold water and put the water tank back.
8. Press the **"Start"** key (3). The first rinsing cycle starts.
9. When the display again shows "**1.0L**" flashing and the oven emits a new beep, remove and empty the water tank.
10. Fill the water tank with 1.0 litres of cold water and put the water tank back.
11. Press the **"Start"** key (3). The second rinsing cycle starts.
12. When the rinsing cycle has finished the display shows "**End**". The message **"DEP"** will be displayed until the water tank is removed.
13. Remove, empty and dry the water tank.

Oven cleaning

Warning! Cleaning should be done with the oven power switched off. Take the plug out of the socket or switch off the oven's power circuit.

Do not use aggressive or abrasive cleaning products, scourers that scratch surfaces or sharp objects, since stains may appear.

Do not use high pressure or steam jet cleaning appliances.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Front surface

Normally you just need to clean the oven with a damp cloth. If it is very dirty, add a few drops of dishwashing liquid to the cleaning water. Afterwards, wipe the oven with a dry cloth.

In an oven with an aluminium front, use a mild glass cleaning product and a soft cloth that does not release any fibres or threads. Wipe from side to side without exerting any pressure on the surface.

Immediately remove limescale, fat, starch or egg white stains. Corrosion can occur under these stains.

Do not let any water get inside the oven.

Oven interior

After use, remove any water on the bottom of the cooking space with a soft cloth. Leave the appliance door open so that the cooking space can cool down.

To remove dirt that is harder to shift, use a non-aggressive cleaning product. **Do not use oven sprays or other aggressive or abrasive cleaning products.**

Always keep the door and the oven front very clean to ensure that the door opens and closes properly.

Make sure water does not enter the oven ventilation holes.

The glass lamp cover is located on the oven ceiling and can be removed easily for cleaning. For this you just need to unscrew it and clean it with water and dishwashing liquid.

Accessories

Clean the accessories after each use. If they are very dirty, soak them first of all and then use a brush and sponge. The accessories can be washed in a dish washing machine.

What should I do if the oven doesn't work?

WARNING! Any type of repair must only be done by a specialised technician. Any repair done by a person not authorised by the manufacturer is dangerous.

You do not need to contact Technical Assistance to resolve the following questions:

- **The display is not showing!** Check if:
  - The time indication has been switched off (see section on Basic Settings).
- **Nothing happens when I press the keys!** Check if:
  - The Safety Block is active (see section on Basic Settings).
- **The oven does not work!** Check if:
  - The plug is correctly fitted in the socket.
  - The oven's power is switched on.
- **When the oven is operating I can hear some strange noises!** This is not a problem.
  - It has to do with the operating noises that can occur during the cooking process, e.g, by the water pumps in the steam generator.
  - The steam inside the cavity produces a pressure build-up and sometimes the cavity walls may produce noise when they react to the pressure.
  - This noises are normal, there is no problem.
- **The food doesn't heat up or heats very slowly!** Check if:
  - You have selected the correct operating times and temperature setting.
  - The food you have put inside the oven is a larger amount or colder than you usually put in.
- **If the message "Err_" appears in the display, please contact the Customer Care.**
- **The appliance still makes a noise after the cooking process is finished!** This is not a problem.
  - The cooling fan keeps on working for some time. When the temperature has dropped sufficiently, the fan will switch itself off.
- **The oven switches on but the interior light does not go on!**
  - If all the functions work properly it is probable that the lamp has blown. You can keep on using the oven.

Replacing the light bulb

To replace the light bulb, proceed as follows:

- Disconnect the oven from the power supply. Take the plug out of the socket or switch off the oven's power circuit.
- Unscrew and remove the glass light cover **(1)**.
- Remove the light bulb **(2)**. Warning! **The bulb may be very hot.**
- Fit a new E14 230-240V/15W bulb. Follow the lamp manufacturer's instructions.
- Screw the glass light cover into place **(1)**.
- Connect the oven again to the power supply.

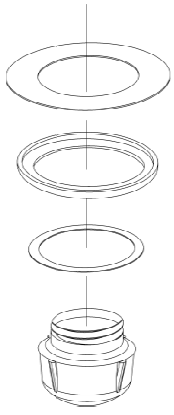

Technical characteristics

Displays

Display	Description
Descaling	
1	Soft water.
2	Medium water.
3	Hard water.
CAL	Appliance must be descaled.
	Flashing – descaling starts.
0.5L	Feed 0.6 litre descaling solution into the water tank.
1.0L	Feed 1 litre cold water into the water tank for rinsing.
Water tank	
rES	Indication that water tank is missing.
dEP	The water tank must be removed, emptied and reinserted.
Steam reduction	
VAP	Indication that steam reduction process is ongoing.
PUMP	Indication that cold water is entering the boiler and hot water is being pumped to the water tank.
FULL	The water tank must be removed, emptied and reinserted.
System warnings	
LAMP	Damaged lamp.
HOt	Temperature in the PCB is too high.
Err1	Error in the pressure sensor.
Err2	Error in the oven's temperature sensor.
Err3	Error in the boiler's temperature sensor.
Err4	Error in the boiler's level detectors.
Err6	Error in the water pump.

Specifications

- AC Voltage ..... (see characteristics plate)
- Power required ..... 1500 W
- Exterior dimensions (W×H×D). ..... 595 × 455 × 542 mm
- Interior dimensions (W×H×D). ..... 420 × 210 × 390 mm
- Oven capacity. ..... 35 l
- Weight ..... 35 kg

Environmental protection

Disposal of the packaging

The packaging bears the Green Dot mark.

Dispose of all the packaging materials such as cardboard, expanded polystyrene and plastic wrapping in the appropriate bins. In this way you can be sure that the packaging materials will be re-used. Keep all packaging away from small children as it may present suffocation/choking hazard.

Disposal of equipment no longer used

According to European Directive 2002/96/EC on the management of waste electrical and electronic equipment (WEEE), home electrical appliances should not be put into the normal systems for disposal of solid urban waste.

Outdated appliances should be collected separately to optimise component material recovery and recycling rates and to prevent potential harm to human health and the environment. The symbol of a rubbish container superimposed by a diagonal cross should be put on all such products to remind people of their obligation to have such items collected separately.

Consumers should contact their local authorities or point of sale and request information on the appropriate places to leave their old home electrical appliances.

Before disposing of your appliance, render it non-usable by pulling out the power cable, cutting it off and disposing of it.

Installation instructions

Before installation

Check that the input voltage indicated on the characteristics plate is the same as the voltage of the power outlet you are going to use.

Open the oven door and **take out all the accessories** and remove the packing material.

Warning! The front surface of the oven may be covered in a **protective film**. Before using the oven for the first time, carefully remove this film, starting on the inside.

Make sure that the oven is not damaged in any way. Check that the oven door closes correctly and that the interior of the door and the front of the oven opening are not damaged. If you find any damage contact our Customer Care Centre on the number supplied on the back cover of this handbook.

DO NOT USE THE OVEN if the power cable or the plug is damaged, if the oven does not function correctly or if it has been damaged or dropped. Contact our Customer Care Centre on the number supplied on the back cover of this handbook.

Put the oven on a flat and stable surface. The oven must not be installed close to any sources of heat, radios or televisions.

During installation, make sure that the power cable does not come into contact with any moisture or objects with sharp edges and the back of the oven. High temperatures can damage the cable.

Warning: after the oven is installed you must make sure you can access the plug.

After installation

The oven is equipped with a power cable and a plug for single phase (household) current, 230-240V ~ 50Hz.

If the oven is to be installed on a permanent basis it must be installed by a qualified technician. In such a case, the oven should be connected to a circuit with an all-pole circuit breaker with a minimum separation of 3 mm between contacts.

WARNING: THE OVEN MUST BE EARTHED.

The manufacturer and retailers do not accept responsibility for any damage that may be caused to persons, animals or property if these installation instructions are not observed.

The oven only functions when the door is closed correctly.

Before the first use, clean the inside of the oven and the accessories, following the cleaning instructions given in the “Oven cleaning” section.

During installation, follow the instructions supplied separately.

Inhaltsverzeichnis

Sicherheitshinweise **36**
Beschreibung des Gerätes **38**
Grundeinstellungen **40**
Grundfunktionen **42**
Automatische Koch Funktionen **45**
Wasser einfüllen **51**
Während des Betriebes... ..... **52**
Zubereitung mit dem Grill **53**
Tabellen und Tipps **54**
Tabellen und Tipps **55**
Wartung **60**
Reinigung und Wartung des Geräts **63**
Was ist im Falle einer Funktionsstörung zu tun? **64**
Technische Eigenschaften **65**
Installationsanleitung **67**
Einbau **68**

Sehr geehrter Kunde:

Danke dass Sie sich für dieses **TEKA** Gerät entschieden haben.

Wir bitten Sie die Gebrauchsanweisung sorgfältig durch zu lesen, das ihnen so die Handhabung des Gerätes erleichtert.

Bewahren Sie die Unterlagen dieses Produktes für eventuelle nach Fragen auf.

Bewahren Sie die Gebrauchsanweisung griffbereit auf. Leihen Sie das Gerät mit der Gebrauchsanweisung aus.

Die Gebrauchsanweisung ist auch auf Unserer Homepage Verfügbar www.teka.com.

Sicherheitshinweise

- **Achtung!** Lassen Sie das Gerät nicht unbeaufsichtigt arbeiten.
- **Achtung!** Falls Sie Rauch oder Feuer bemerken, dann halten Sie die Tür geschlossen, um die Flammen zu ersticken. Schalten Sie das Gerät ab und ziehen Sie den Stecker aus der Steckdose oder unterbrechen Sie die Stromversorgung des Gerätes.
- Überhitzte Fette und Öle können sich leicht entzünden. Erhitzen Sie deshalb kein Öl und Fett im Garraum. Versuchen Sie niemals brennendes Fett oder Öl mit Wasser zu löschen (Explosionsgefahr)! Ersticken Sie die Flammen mit einem feuchten Tuch und halten Sie alle Türen und Fenster geschlossen.
- **Achtung!** Benutzen Sie keinen hochprozentigen Alkohol zum Garen im Gerät. Es kann zu einer Überhitzung der Lebensmittel führen, Explosionsgefahr!
- **Achtung!** Dieses Gerät ist nicht für den Gebrauch durch Personen (einschließlich Kindern) geeignet, die nicht im vollen Besitz ihrer körperlichen, sensorischen und geistigen Fähigkeiten sind. Benutzer, denen es an Erfahrung und Kenntnis des Geräts mangelt oder die nicht in die Verwendung des Geräts eingewiesen wurden, müssen durch eine Person überwacht werden, die für ihre Sicherheit verantwortlich ist.
- Kinder müssen überwacht werden, um sicher zu stellen, dass sie nicht mit dem Gerät spielen.Benutzen Sie die Kindersicherung.
- Während des Gebrauches kann das Gerät sehr heiß werden. Bitte seien Sie vorsichtig und vermeiden Sie jeglichen Kontakt mit den Heizkörpern im Innenraum des Gerätes. **VERBRENNUNGSGEFAHR!**
- **Vorsicht!** Zugängliche Teile können während des Gebrauches heiß werden. Kinder sind vom Gerät fernzuhalten.
- **Achtung!** Wenn Sie die Tür während oder nach dem Kochvorgang öffnen, können heißer Dampf und Wassertropfen aus dem Gerät entweichen. Bitte auf die Seite gehen oder zurück treten.
- **Vorsicht!** Klemmen Sie nie die Netzkabel anderer elektrischer Geräte in die heiße Gerätetür ein. Die Isolierung des Kabels kann schmelzen. **Kurzschlussgefahr!**

Sicherheitshinweise

Dieses Gerät ist lediglich für den Hausgebrauch bestimmt!

Dieses Gerät ist für die Zubereitung der Lebensmittel im Haushalt geeignet. Es wird keine Haftung übernommen für Schäden, die durch ungeeigneten oder unzulässigen Gebrauch entstehen.

Wenn Sie den Hinweisen gemäß vorgehen, dann vermeiden Sie Schäden am Gerät und sonstige gefährliche Situationen:

- Verdecken oder verstopfen Sie die Belüftungslöcher und -schlitze nicht.
- Bewahren Sie keine Gegenstände im Gerät, die bei unbeabsichtigtem Einschalten eine Gefahr darstellen können.
- Nutzen Sie das Gerät nicht als Speisekammer.
- Gießen Sie keinen Branntwein (z.B. Brandy, Whisky, Schnaps, usw.) über die warmen Speisen. Explosionsgefahr!
- Zubehör wie Roste und Backbleche usw. werden im Garraum sehr heiß. Benutzen Sie Topflappen.
- Um Verbrennungen zu vermeiden, tragen Sie immer Küchenhandschuhe, beim Umgang mit Geschirr und Gefäßen wenn Sie das Geräteinnere berühren.
- Stützen oder setzen Sie sich nicht auf die geöffnete Gerätetür. Das kann Schäden besonders im Bereich der Scharniere hervorrufen. Die Tür hält maximal 8 kg aus.
- Die Roste halten einer Höchstbelastung von 8 kg stand. Überschreiten Sie diese Belastung nicht, um Schäden zu vermeiden.

Reinigung:

- Nachdem das Gerät ausgeschaltet ist, bleibt es für einige Zeit heiß. Bitte geben Sie genug Zeit zur Abkühlung bevor Sie, z.B, mit der Reinigung beginnen.
- Keine scharfen, aggressiven Reiniger oder scharfe Metallschaber für die Reinigung des Glases der Backofentür benutzen, da Sie die Oberfläche verkratzen können. Das Glas kann zerstört werden..
- Die Kontaktflächen der Tür (Stirnseite des Garraums und Innenseite der Tür) müssen sehr sauber gehalten werden, um die einwandfreie Funktionsweise zu gewährleisten.
- Bitte beachten Sie die Hinweise bezüglich der Sauberkeit unter dem Punkt “Reinigung und Wartung des Gerätes”.

Im Falle einer Reparatur:

- Falls das Netzkabel beschädigt wird, ist es vom Hersteller, von autorisierten Vertretern oder von für diese Aufgabe qualifizierten Technikern zu ersetzen, um gefährliche Situationen zu vermeiden. Außerdem ist dazu Spezialwerkzeug notwendig.
- Reparaturen und Wartungsarbeiten, besonders an unter Strom stehenden Teilen, dürfen nur durch vom Hersteller autorisierte Techniker ausgeführt werden.

DE

Beschreibung des Gerätes

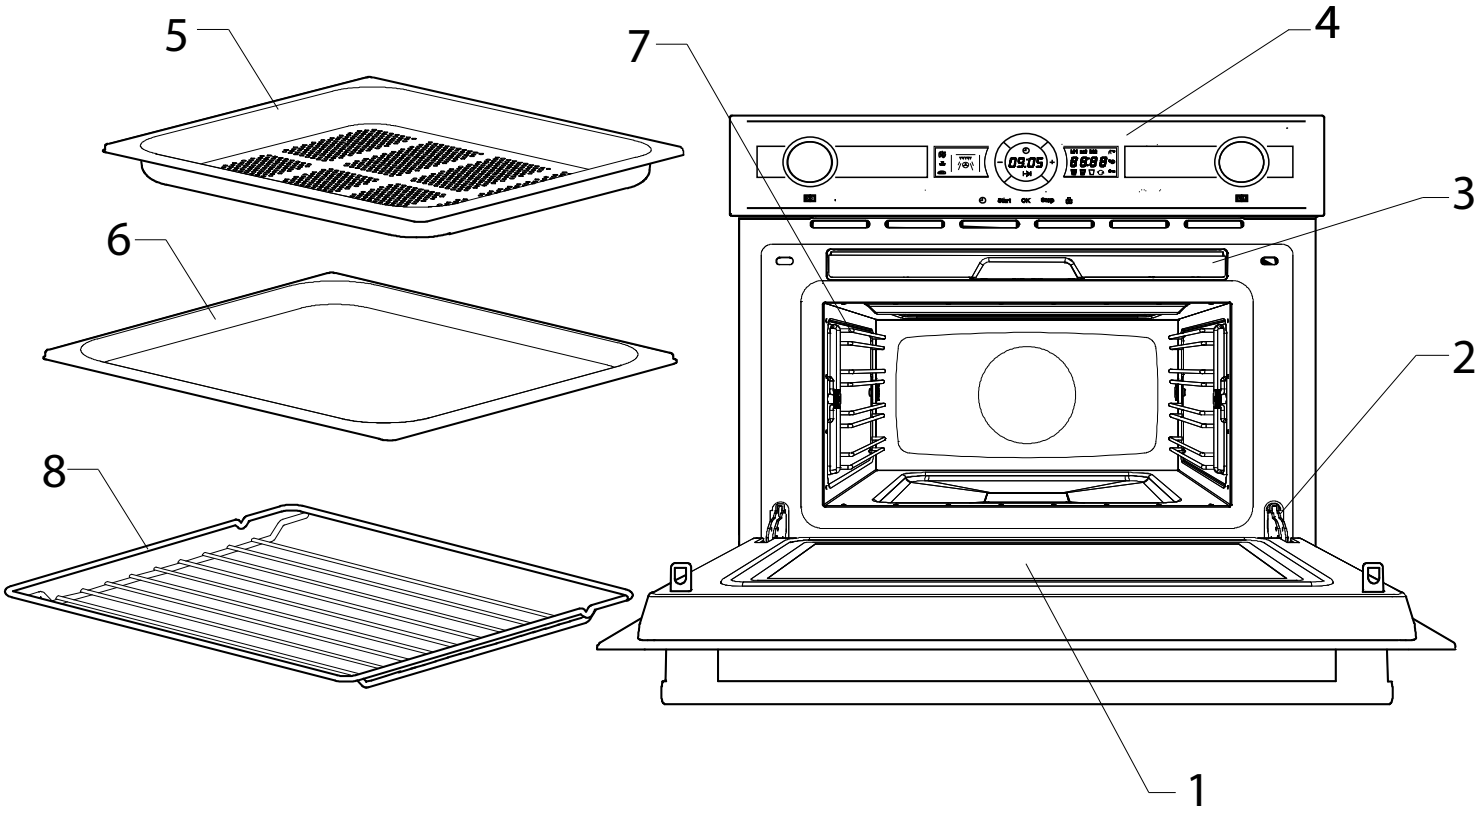

1. – Türglass
2. – Sicherheitsverriegelung
3. – Wassertank
4. – Bedienblende
5. –Gelochtes Backblech
6. – Backblech
7. – Seitengitter
8. - Rost
9. - Lampe

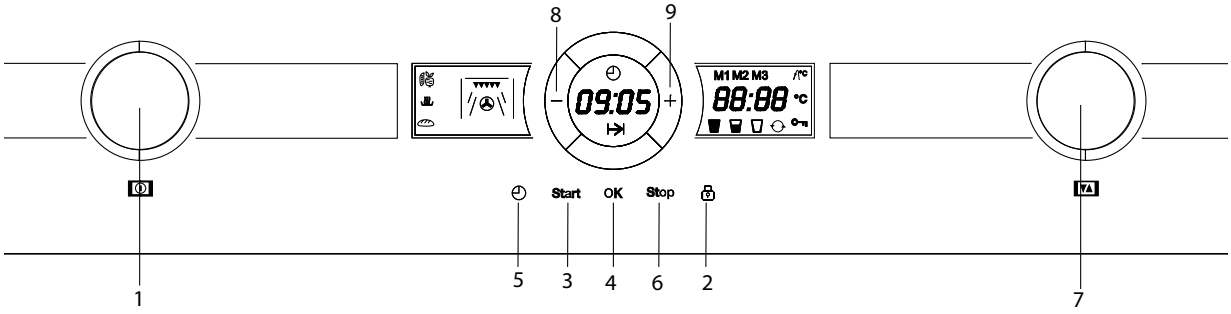

1. Funktionswahlschalter
2. Verriegelungstaste
3. Start taste
4. OK taste
5. Uhr taste
6. Stop taste
7. Drehknopf
8.”Minus” taste
9. “Plus” taste

Beschreibung des Gerätes

Funktion Beschreibung

Symbol	Funktion	Lebensmittel
	Dampfgaren	Alle Gemüse, Reis, Fisch-, und Fleischarten zubereiten und aufwärmen. Beeren entsaften. Gemüse gleichzeitig auftauen und garen.
	Regenerieren & Sterilisieren	Teller- und Fertiggerichte regenerieren. Gemüse und Obst sterilisieren.
	Profi Kochen	Fein Konditorei und Kuchen.
	Heißluft	Verschiedene Fischarten zubereiten.
	Dampfgaren + Heißluft	Verschiedene Fleischarten zubereiten.
	Grill	Verschiedene Arten von Fleisch und Fisch Grillen.
M1 M2 M3	Speicher Funktionen	Zeigt die Gespeicherten Funktionen an.
	Gargutsonde	Zeigt die Temperatur der Lebensmitteln an.
	Wasser Tank	Zeigt an das der Wasser tank voll ist.
	Wasser Tank	Zeigt an das der Wasser tank halb voll ist.
	Wasser Tank	Zeigt an das der Wasser Tank leer ist.
	Entkalkungs-Funktion	Zeigt an das das Gerät sich im Entkalkungs- Prozess befindet.

Grundeinstellungen

Einstellung der Uhr

Nach Anschluss des Gerätes an das Netz oder nach einem Stromausfall blinkt die Uhr und zeigt damit an, dass die Uhrzeit nicht korrekt ist. Gehen Sie folgendermaßen vor, um die Uhr einzustellen:

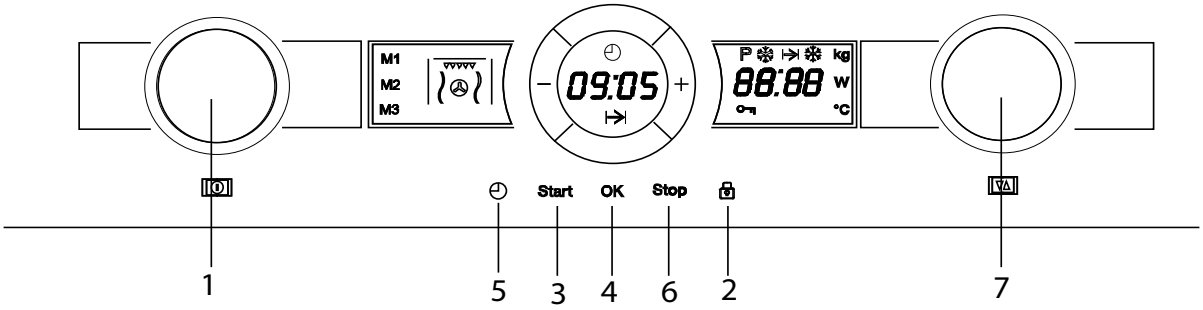

Das Blinken der Uhrzeit beim erstmaligen Einschalten des Geräts oder nach einem Stromausfall zeigt an, dass die eingestellte Uhrzeit nicht korrekt ist. Um die Zeit einzustellen, gehen Sie bitte wie folgt vor:

1. Drücken Sie die Uhr taste (5), wenn das Uhr/Dauer Display die Uhrzeit anzeigt (nicht notwendig nach einem Stromausfall oder beim erstmaligen Einschalten des Geräts). Die Stundenzahl beginnt nun zu blinken.
2. Drücken Sie die “+” und “-” tasten, um die korrekte Stundenzahl einzustellen.
3. Drücken Sie nochmals die Uhr taste (5), um die Minuten einzustellen. Die Minutenzahl beginnt nun zu blinken.
4. Drücken Sie die “+” und “-” tasten, um die korrekte Minutenzahl einzustellen.
5. Um den Vorgang abzuschließen, drücken Sie nochmals die Uhr taste (5).

Wasserhärte einstellen

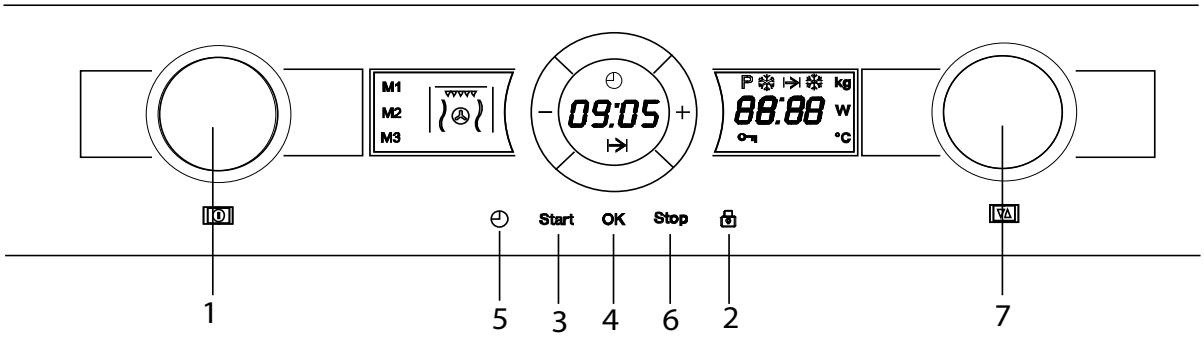

Das Gerät verfügt über ein System, das automatisch anzeigt, wann eine Entkalkung des Geräts notwendig ist.

Das System kann für einen Haushalt mit sehr weichem Wasser (auch durch die Verwendung eines Wasserenthärtungsgerätes) oder mit sehr hartem Wasser (siehe folgende Tabelle) durch ändern der Wasserhärteeinstellungen optimiert werden:

Um den Wasserhärteparameter einzustellen, gehen Sie wie folgt vor:

1. Drücken Sie die “+” und “-” tasten +“❹. Der Härtegrad leuchtet auf dem Display auf (die Schritte 1 und 2 können übersprungen werden, falls das Gerät zum ersten Mal angeschlossen wird, oder nach einem Stromausfall).
2. Bestätigen Sie den Wert durch Drücken der „OK“ taste (4).

.

Grundeinstellungen

Typ	Wasserhärte				Anzeige
	Ca + Mg (ppm)	Englische Grad. [°eH]	Französische Grad. [°fH]	Deutsche Grad. [°dH]	
Weiches Wasser	0 bis 150	0 bis 11	0 bis15	0 bis 8	1
Mittelhartes Wasser	151 bis 350	12 bis 25	16 bis 35	9 bis 20	2
Hartes Wasser	501 bis 500	26 bis 35	36 bis 50	21 bis 28	3

Einblenden/Ausblenden der Uhr

Wenn Sie die Uhr als störend empfinden, können Sie sie ausblenden, indem Sie die Uhr taste (5) 3 Sekunden lang gedrückt halten. Der Doppelpunkt zwischen der Stunden- und der Minutenzahl blinkt, die Uhr wird jedoch ausgeblendet.

Wenn Sie die Uhr wieder sehen möchten, halten Sie die Uhr taste nochmals 3 Sekunden lang gedrückt.

Sicherheitsverriegelung

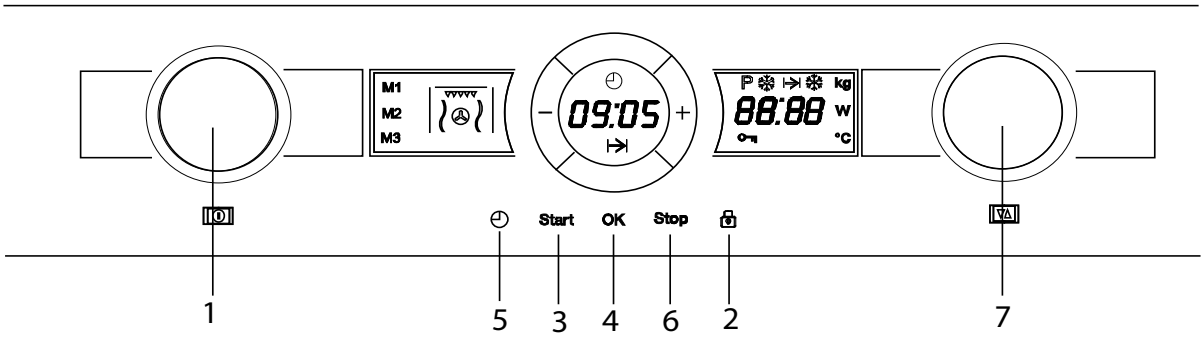

Der Ofenbetrieb kann blockiert werden (zum Beispiel, damit das Gerät von Kindern nicht benutzt wird).

1. Halten Sie zum Verriegeln des Geräts die Verriegelungstaste (2) 3 Sekunden lang gedrückt. Sie hören ein akustisches Signal, und die Verriegelungsanzeige erscheint. Der Ofen ist nun in diesem Zustand blockiert und kann nicht verwendet werden.

Halten Sie zum Entriegeln des Geräts die Verriegelungstaste (2) 3 Sekunden lang gedrückt. Sie hören ein akustisches Signal, die Verriegelungsanzeige schaltet sich aus.

Grundfunktionen

Dampfgaren

Benutzen Sie diese Funktion, um alle Gemüse, Reis, Fisch-, und Fleischarten zu Garen. Ist auch geeignet zum Entsaften von Beeren und für das gleichzeitige Auftauen und Garen von Gemüse.

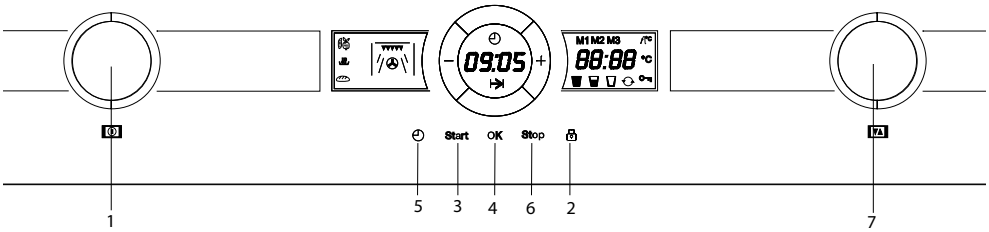

1. Drehen Sie den Funktionswahlschalter (1), bis die Anzeige für die Funktion Dampfgaren zu blinken beginnt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die Dauer einzustellen.
3. Bestätigen Sie die Eingabe durch Drücken der Bestätigungstaste (4). Die Temperatur anzeige blinkt. Die Temperatur anzeige blinkt.
4. Wählen Sie die gewünschte Temperatur, indem Sie den Drehknopf (7) in irgendeine der Richtungen drehen.
5. Bestätigen Sie die Eingabe durch Drücken der OK (4).
6. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet

Heißluft

Diese Funktion zum Backen und Braten benutzen .

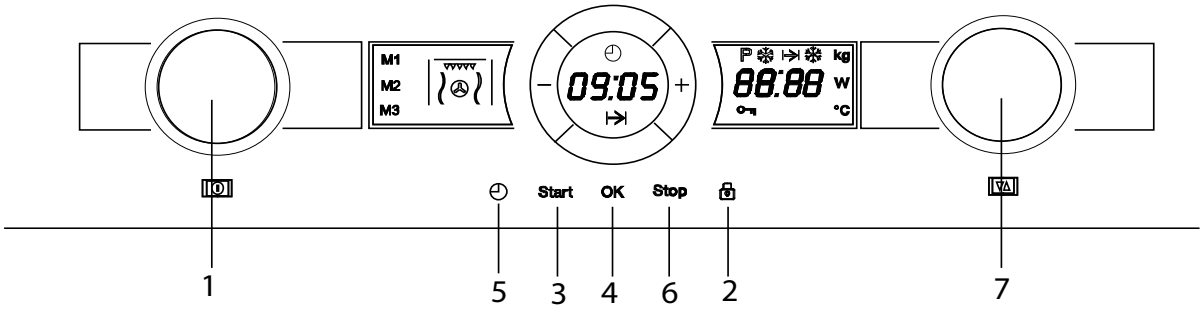

1. Drehen Sie den Funktionswahlschalter (1), bis die Anzeige für die Funktion Konvektion zu blinken beginnt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die Dauer einzustellen.
3. Bestätigen Sie die Eingabe durch Drücken der OK taste (4). Die Temperatur anzeige blinkt.
4. Wählen Sie die gewünschte Temperatur, indem Sie den Drehknopf (7) in irgendeine der Richtungen drehen.
5. Bestätigen Sie die Eingabe durch Drücken der OK (4).
6. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Grundfunktionen

Heißluft + Dampf

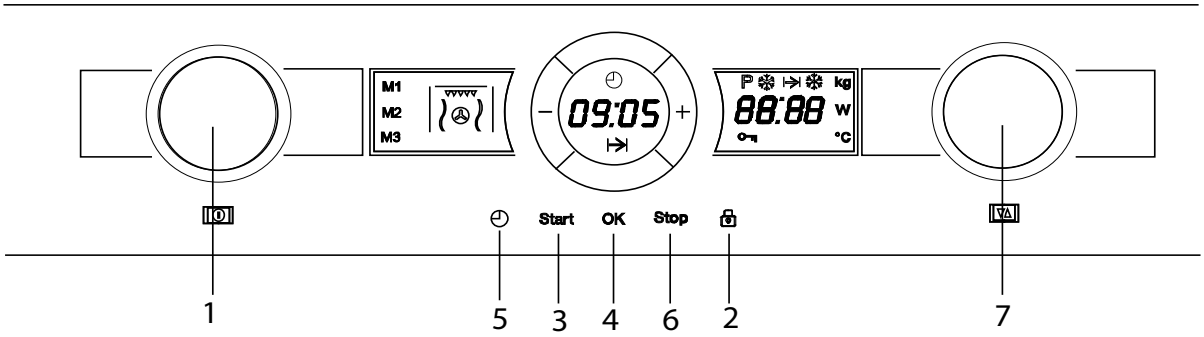

1. Drehen Sie den Funktionswahlschalter (1), bis die Heißluft + Dampf Funktionsanzeige zu blinken beginnt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die Dauer einzustellen.
3. Bestätigen Sie die Eingabe durch Drücken der OK (4). Die Temperatur anzeige blinkt. Die Temperatur anzeige blinkt.
4. Wählen Sie die gewünschte Temperatur, indem Sie den Drehknopf (7) in irgendeine der Richtungen drehen.
5. Bestätigen Sie die Eingabe durch Drücken der OK (4).
6. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet
   .

Grill

Verwenden Sie diese Funktion, um die Nahrungsmittel von oben schnell zu bräunen.

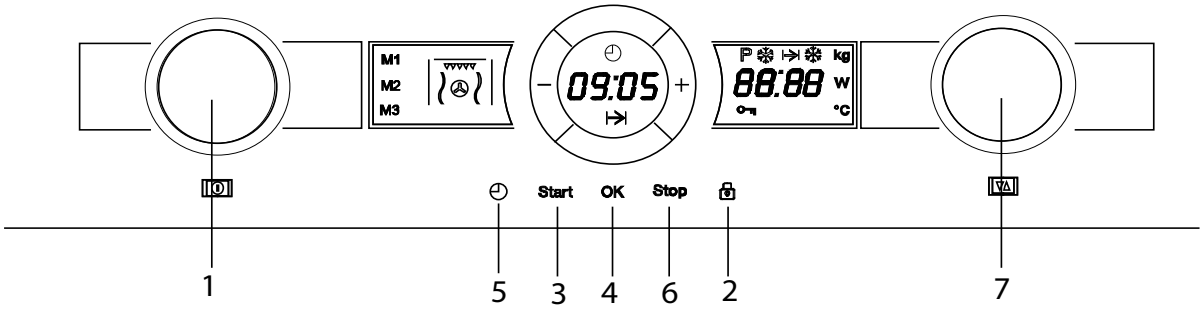

1. Drehen Sie den Funktionswahlschalter (1), bis die Grill Funktionsanzeige zu blinken beginnt. Auf dem Uhr/Dauer Display blinkt nun „10:00“.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die Dauer einzustellen.
3. Bestätigen Sie die Eingabe durch Drücken der Bestätigungstaste (4).
4. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Grundfunktionen

Funktion Grill + Heißluft

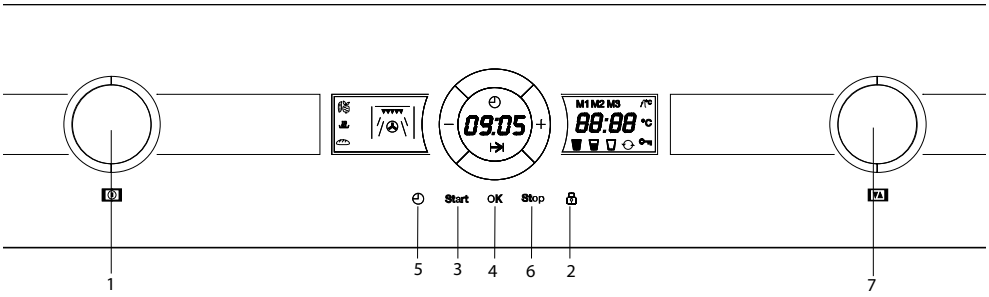

1. Drehen Sie den Funktionswahlschalter (1), bis die Anzeige für die Funktion Grill + Heißluft zu blinken beginnt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die Dauer einzustellen.
3. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Automatische Koch Funktionen

Automatische Koch Funktion A

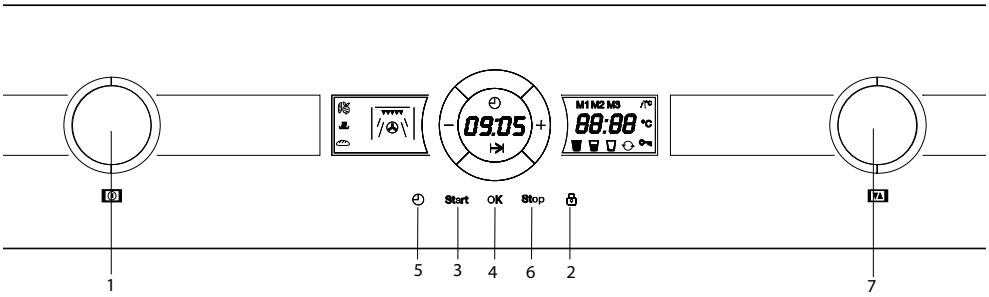

1. Drehen Sie den Funktionswahlschalter (1), bis die. Automatische Koch Funktion A blinkt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung um die von ihnen Gewünschte Funktion aus zu wählen.
3. Drücken Sie die “OK” taste um zu Bestätigen. Drehen Sie den Drehknopf (7) in die entsprechende Richtung um den von ihnen Gewünschte unter Menü aus zu wählen (A1.1, A1.2…).
4. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Funktion	Programm	Temperatur (°C)	Dauer (min.)
Obst			
A1	A1.1	100	20
	A1.2	100	25
	A1.3	100	15
Fisch			
A2	A2.1	80	25
	A2.2	90	15
	A2.3	80	18
Beilagen			
A3	A3.1	100	20
	A3.2	100	25
	A3.3	100	30

Automatische Koch Funktionen

Automatische Koch Funktion B

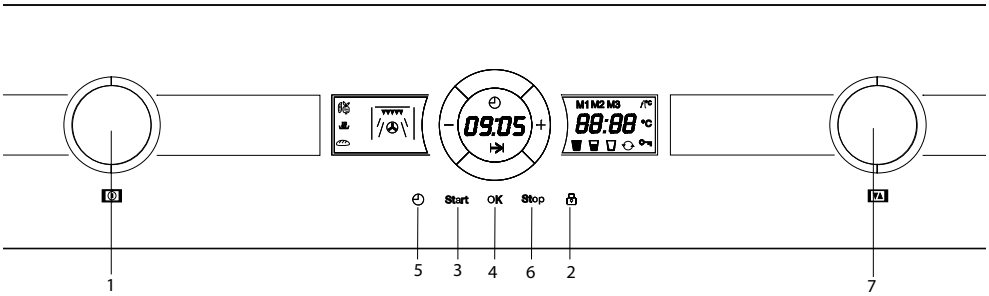

1. Drehen Sie den Funktionswahlschalter (1), bis die.Automatische Koch Funktion b blinkt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung um die von ihnen Gewünschte Funktion aus zu wählen.
3. Drücken Sie die “OK” taste um zu Bestätigen
4. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Funktion		Temperatur (°C)	Dauer (min.)	Temperatur(°C)		Dauer	
				Min.	Máx.	Min.	Máx.
Heißluft + Dampf	B1	110	13	100	140	5 min.	45 min.
Dampf	B2	100	35	Default		0	9h50
	B3	80	35	Default		0	9h50

Automatische Koch Funktionen

Automatische Koch Funktion C

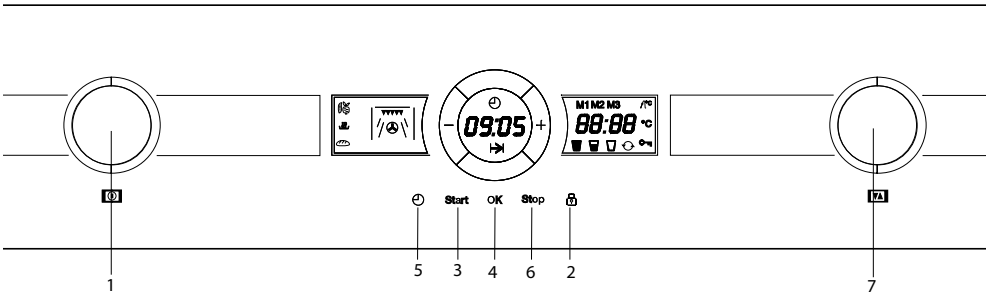

1. Drehen Sie den Funktionswahlschalter (1), bis die. Automatische Koch Funktion C blinkt.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung um die von ihnen Gewünschte Funktion aus zu wählen.
3. Drücken Sie die “OK” taste um zu Bestätigen. Drehen Sie den Drehknopf (7) in die entsprechende Richtung um den von ihnen Gewünschte unter Menü aus zu wählen (C1.1, C1.2…).
4. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Funktion		Programm	Temperatur (°C)	Dauer (min.)
Brot				
Brötchen Backen	C1	C1.1	200	15
Tiefgekühlte Brötchen		C1.2	200	20
Frisch Teig		C1.3	180	25
Weiß Brot		C1.4	190	50
Hefezopf		C1.5	200	40
Gratin/Pizza				
Gratin, Frisch	C2	C2.1	160	60
Gratin, Vorgekocht		C2.2	160	50
Frisch Auflauf		C2.3	180	35
Vorgekochter Auflauf		C2.4	180	30
FrischePizza		C2.5	220	25
Tiefgekühlte Pizza		C2.6	220	35

Speicher Funktionen

Speicher Funktionen (M1 – M3)

Diese Funktion benutzen um Koch Program zu Speichern.

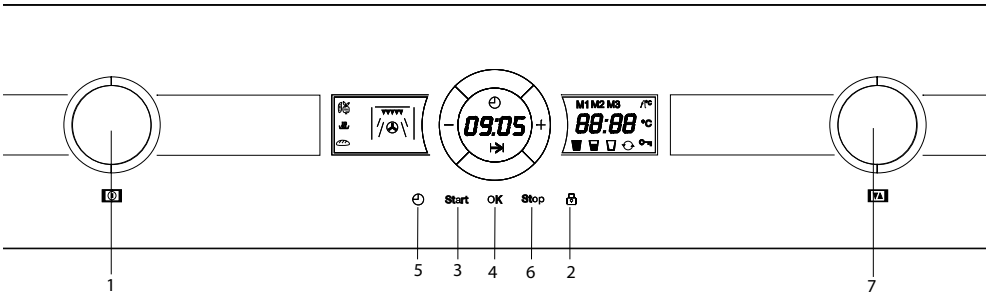

1. Drehen Sie den Funktionswahlschalter (1), um die von ihnen Gewünschte Funktion aus zu wählen.
2. Drehen Sie den Drehknopf (7) in die entsprechende Richtung, um die von ihnen gewünschten Einstellungen einzustellen.
3. Drücken Sie die Uhr (5) taste circa 5 Sekunden lang. Die Anzeige M1 blinkt.
4. Drehen Sie den Drehknopf (7) um die von ihnen Gewünschten Speicher aus zu wählen (M1-M3).
5. Bestätigen Sie die Eingabe durch Drücken der OK taste (4).

Auswählen einert Gespeicherten Funktion

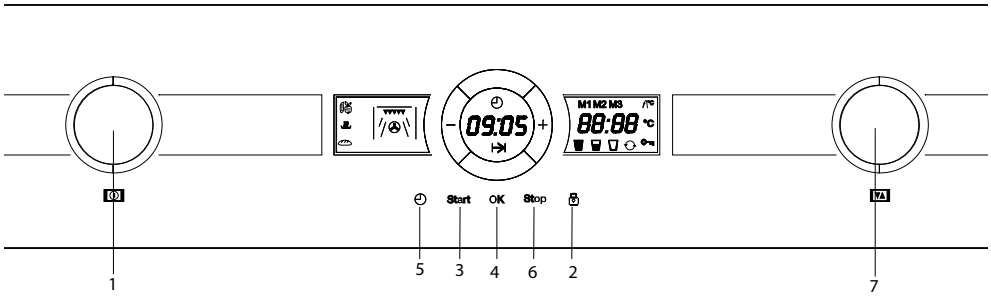

1. Drehen Sie den Drehknopf (7) um die von ihnen Gewünschten Speicher aus zu wählen (M1-M3).
2. Drücken Sie den Start Knopf (3). Die Mikrowelle wird automatisch gestartet.

Speicher Funktionen

Gespeicherte Funktion Löschen

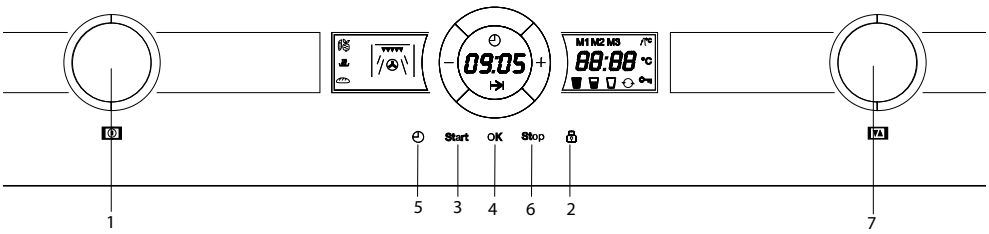

1. Drehen Sie den Funktionswahlschalter (1), um den von ihnen Gewünschten Speicher aus zu wählen (M1-M3).
2. Drücken Uhr Taste (5) circa 4 Sekunden lang.
3. Die rechte anzeige zeigt das Word **„dEL“**

DE

Gargutsonde

Die Gargutsonde misst die Temperatur des Fleisches, sobald die definierte Temperatur für das Fleisch erreicht ist, beendet das Gerät automatisch den Kochvorgang.

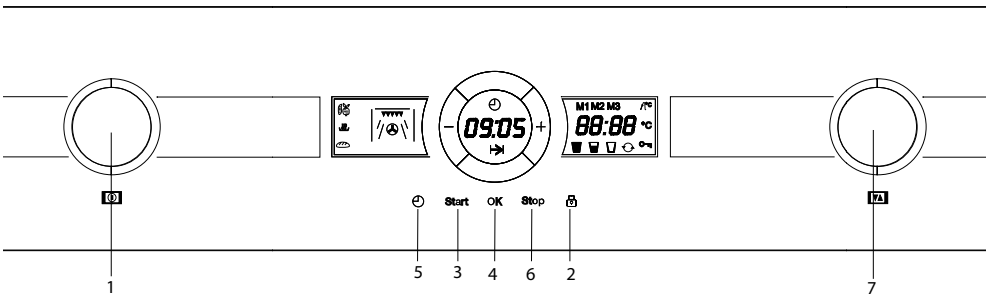

1. Setzen Sie die Gargutsonde ein.
2. Die Anzeige wird die Voreingestellte Temperatur anzeigen..
3. Drehen Sie den Drehknopf (7) um die Gewünschte Temperatur ein zu stellen.
4. Druecken Sie die „OK“ taste (4) um die Temperatur zu Bestaetigen.
5. Druecken Sie „Start“ taste (3)

<u>Achtung!</u> Bitte decken Sie den Anschluss der Gargutsonde, sobald Sie diese nicht mehr benutzen umso eventuelle Schäden am Gerät zu Vermeiden.

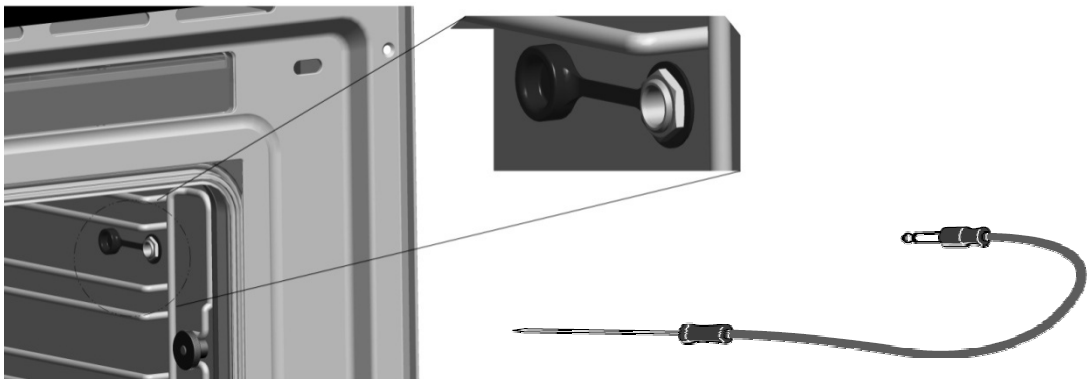

Benutzen Sie nur die Gargutsonde die mit dem Gerät geliefert ist.

Wasser einfüllen

Wassertank füllen

Bei allen Funktionen muss der Wassertank voll sein.

Wassertank mit kaltem, frischem Trinkwasser bis zu der „MAX“ Markierung füllen und bis zur Rastung über den Innenraum einschieben.ca. 1l

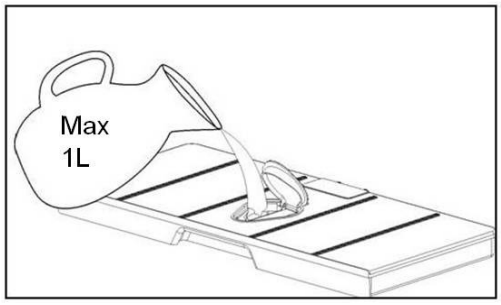

Wasser nachfüllen

Der Wasserinhalt reicht normalerweise für einen Kochvorgang von 50-60 Minuten.

Achtung! Nur maximal bis 0,5 Litern nachfüllen, um sicher zu seien, dass das Wasser beim Zurückpumpen in den Wassertank nicht überläuft. GEFAHR DES ÜBERLAUFENS!

Wassertank entleeren

Wenn das Gerät ausgeschaltet wird, wird das restliche Wasser zurück in den Wassertank gepumpt.

Während das Wasser abgepumpt wird steht auf der Anzeige „PUMP".

Diese Information wird so lange angezeigt bis das Wasser eine Temperatur von 75℃ erreicht hat, bevor es wieder zurück in den Wassertank gepumpt wird.

Achtung: das Wasser im Tank kann heiß sein. Gefahr von Brandverletzungen!

Nachdem das Wasser wieder zum Wassertank gepumpt wurde, steht auf der Anzeige „DEP“ Gehen Sie wie folgt vor:

- Den Wassertank aus dem Gerät ziehen und entleeren.
- Den Wassertank austrocknen und wieder ins Gerät schieben. Den Innenraum des Gerätes trocken wischen.
- Lassen Sie die Gerätetür geöffnet, bis das Gerät abgekühlt und völlig trocken ist.

WICHTIGE ANMERKUNG: Nach jedem Garvorgang wird empfohlen, den Wassertank zu entfernen und zu entleeren. Es vermeidet die Entwicklung von Bakterien und Kalk im Gerät. Wollen Sie zwei Dämpfvorgänge nacheinander starten, muss der Wassertank nicht entleert werden. Auf der Anzeige steht „DEP“.

Um diese Warnung zu löschen, drücken Sie die **Stopp** Taste und ein neuer Kochvorgang kann gestartet werden ohne die Entfernung und Entleerung des Wassertanks.

Während des Betriebes...

Unterbrechung eines Kochvorgangs

Sie können den Kochvorgang jederzeit unterbrechen, indem Sie einmal die Taste **Start**/**Stopp** drücken.

Das Gerät hat eine Dampfabbaufunktion, die durch die Taste **Stopp** aktiviert wird. Der Dampfaustritt beim öffnen der Tür wird dadurch vermindert.

Es dauert ungefähr drei Minuten und während dieser Zeit steht **„VAP“** auf dem Display.

Achtung: wenn die Tür geöffnet wird, während oder nach dem Garvorgang, tritt heißer Dampf aus dem Gerät Bitte auf die Seite gehen oder zurück treten.

In diesem Moment:

- **Die Dampferzeugung wurde unterbrochen.**
- Die Garraumwände und der Wassertank sind noch sehr heiß**. Gefahr von Brandverletzungen!**
- Die Uhranzeige stoppt und die Restliche Betriebszeit wird angezeigt (falls sie eingestellt wurde).

Falls Sie es wünschen, können Sie:

1. die Lebensmittel wenden oder umrühren
2. die Prozessparameter ändern,

Schließen Sie die Tür und drücken Sie die Taste **Start**, um den Vorgang wieder aufzunehmen.

Änderung der Parameter

Die Betriebsparameter (Dauer und Temperatur) können gerändert werden, während das Gerät in Betrieb ist oder falls der Garvorgang unterbrochen wurde. Gehen Sie folgendermaßen vor:

1. Um die Dauer zu ändern, drücken Sie die „+“- und „-“-Tasten. Die neue definierte Dauer ist sofort gültig.
2. Um die Temperatur zu ändern, drücken Sie die Temperaturwahltaste, die entsprechende Anzeige und Leuchte blinken. Drücken Sie die „+“- und „-“-Tasten um die Parameter zu ändern. Zur Bestätigung die Temperaturwahltaste drücken.

Einen Kochvorgang löschen

Falls Sie den Garvorgang löschen möchten, drücken Sie zweimal die Taste **Stopp**.

Daraufhin ertönen 3 Signale, und auf der **Anzeige** erscheint „End“.

Ende eines Kochvorgangs

Nach Ende des Garvorgangs oder nach drücken der **Stopp**-Taste, fängt die Dampfabbaufunktion an.

Diese Funktion stößt schrittweise den Dampf aus dem Garraum, so dass weniger Dampf beim öffnen der Tür aus dem Gerät strömt.

Es dauert ungefähr 3 Minuten und während dieser Zeit steht in der Anzeige „**VAP**“

Am Ende des Vorgangs ertönen 3 Signale, und auf der Anzeige erscheint die Angabe „**End**“.

Achtung: wenn die Tür geöffnet wird, während oder nach dem Garvorgang, kommt heißer Dampf aus dem Gerät. Bitte auf die Seite gehen oder zurück treten.

Die Signale wiederholen sich alle 30 Sekunden, bis die Tür geöffnet wird oder die **Stopp**-Taste gedrückt wird.

Nachdem das Gerät ausgeschaltet wurde läuft das Gebläse einige Zeit weiter. Diese Funktion soll die Temperatur des Einbaugeräts reduzieren.

Wen auf der Anzeige **„DEP“** erscheint ist das Wasser zurückgepumpt und Sie können den Wassertank entnehmen.

Entnehmen sie den Wassertank und trocknen ihn gründlich ab. Den Geräteinnenraum etwas abkühlen lassen und dann mit einem Tuch trockenwischen. Die Gerätetür sollte noch einige Zeit geöffnet bleiben damit das Gerät völlig austrocknet.

Restwassermenge im Garraum

Um die Restwassermenge im Garraum zu reduzieren, bietet es sich an, in die unterste Einschubebene ein geschlossenes Blech einzuschieben. Dieses fängt das von dem Gargut abtropfende Kondensat auf und vermindert zum Einen die Restwassermenge im Gerät. Zum Anderen kann dann das noch vorhandene Restwasser einfach mit einem Trockentuch aufgenommen werden.

Zubereitung mit dem Grill

Benutzen Sie den mit dem Gerät mitgelieferten Rost, um gute Ergebnisse mit dem Grill zu erreichen.

Setzen Sie den Grillrost so ein, dass er die Metalloberflächen des Nutzraumes nicht berührt, da die Gefahr der Entstehung eines Lichtbogens gegeben ist, der das Gerät beschädigen kann.

WICHTIGE HINWEISE:

1. Beim ersten Einsatz des Grills ist das Auftreten von etwas Rauch und Geruch festzustellen, das auf den Gebrauch von Ölen während der Herstellung zurückzuführen ist.
2. Die Glasscheibe der Tür erreicht während des Betriebs sehr hohe Temperaturen. **Halten Sie Kinder fern!**
3. Während der Nutzung des Grills erreichen die Wände des Innenraumes sehr hohe Temperaturen. Es wird der Gebrauch von Küchenhandschuhen empfohlen.
4. Wird der Grill über einen längeren Zeitraum betrieben, ist es normal, dass die Heizelemente durch das Sicherheitsthermostat zeitweise ausgeschaltet werden.
5. **Wichtig!** Wenn die Nahrungsmittel in Gefäßen gegrillt oder gegart werden, ist es notwendig, zu überprüfen, ob die Gefäße dazu geeignet sind oder nicht. Siehe Abschnitt über die Art des Geschirrs!
6. Beim Einsatz des Grills ist es möglich, dass Fettspritzer an das Heizelement gelangen und verbrannt werden. Das ist normal und stellt keinerlei Art von Funktionsstörung dar.
7. Reinigen Sie den Innenraum und das Zubehör nach jeder Zubereitung, damit der Schmutz nicht verkrustet.

Tabellen und Tipps

Anwendung des Zubehörs

Der gelochte Garbehälter wird zum Dämpfen von frischen oder tiefgekühltem Gemüse, Fleisch und Geflügel benutzt.

Hierbei ist es wichtig, dass der ungelochte Garbehälter in die erste Leiste von unten in das Gerät eingeschoben wird. Die heruntertropfenden Flüssigkeiten werden so aufgefangen und verschmutzen nicht das Gerät. Der mit Lebensmittel belegte gelochte Garbehälter wird in die zweite Leiste von unten eingeschoben.

Der ungelochte Garbehälter wird zum Dämpfen von empfindlichen Lebensmitteln benutzt z.B Kompott, Klöße und Quellgerichte.

Der Rost wird zum Dämpfen von kleineren Garbehältern als Stellfläche benutzt z.B. Dessertschalen und zum Regenerieren von Tellergerichten.

Genaue Angaben entnehmen Sie den Tabellen.

Die angegebenen Werte für Gardauer und Temperatur sind Richtwerte. Je nach Art und Beschaffenheit des Gargutes kann die effektiv notwendige Gardauer davon abweichen.

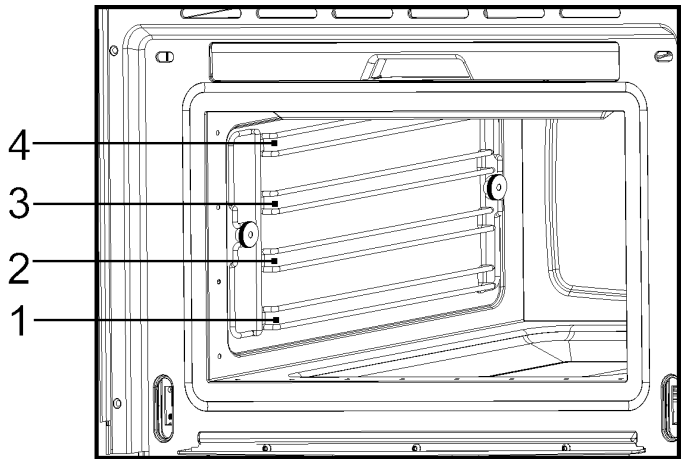

Um den Rost heraus zu nehmen gehen Sie wie in der Abbildung vor. Das Rost leicht nach oben kippen und dann raus ziehen.

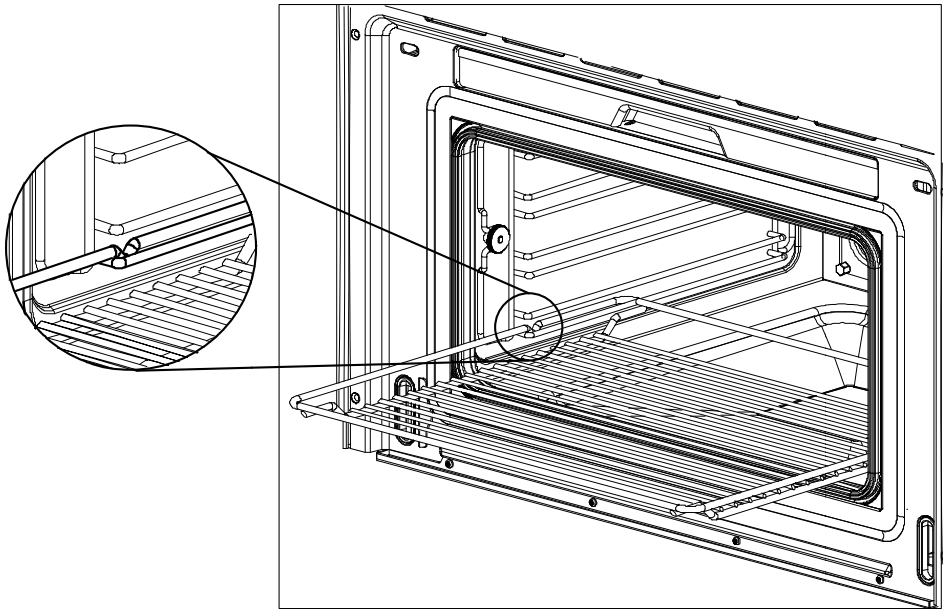

Wir empfehlen beim Kochen den Rost mit dem Backblech zu benutzen umso das tropfen von den Lebensmittel im Innenraum des Gerätes zu vermeiden.

Tabellen und Tipps

Fisch

Fisch	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Dorade	800-1200 g	80	30-40	gelocht	2
Forelle	4 x 250 g	80	20-25	gelocht	2
Lachsfilet	500-1000 g	80	15-25	gelocht	2
Lachsforelle	1000-1200 g	90	25-35	gelocht	1/2
Riesengarnelen	500-1000 g	90	15-20	gelocht	2
Grünschalmuscheln	1000-1500 g	100	25-35	gelocht	2
Heilbuttfilet	500-1000 g	80	20-25	gelocht	2
Herzmuscheln	500-1000 g	100	10-20	geloch	2
Hummer, TK	800-1200 g	100	25-30	gelocht	1/2
Kabeljaufilet	1000-1200 g	90	20-25	gelocht	2
Miesmuscheln	1000-1200 g	100	15-25	gelocht	2
Saibling	4 x 250 g	80	25-30	gelocht	2
Schellfisch	1000-1200 g	90	20-25	gelocht	2
Thunfischfilet	500-1000 g	80	15-20	gelocht	2
Zander	4 x 250 g	80	25-30	gelocht	2

Tabellen und Tipps

Fleisch

Fleisch	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Hähnchenbollen	4-10	100	40-45	gelocht	2
Hähnchenbrust	4-6	100	25-35	gelocht	2
Kasseler	500g -1000g	100	40-50	gelocht	2
Putenschnitzel	4-8	100	20-25	gelocht	2
Schweinefilet, ganz	4-8	100	20-30	gelocht	2
Würstchen		80-100	10-15	gelocht	2

Eier

Eier	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Ei im Glas	100	10-15	Rost	2
Eier, hart	100	15	Rost	2
Eier, weich	100	10-12	Rost	2

Beilagen

Beilagen	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Graupen + Flüssigkeit	200g + 400ml	100	30-35	Rost, Glasschale	2
Grieß + Flüssigkeit	200g + 300ml	100	10-20	Rost, Glasschale	2
Linsen + Flüssigkeit	200g + 375ml	100	20-50	Rost, Glasschale	2
Reis + Flüssigkeit	200g + 250ml	100	25-40	Rost, Glasschale	2

Tabellen und Tipps

Gemüse

Gemüse/ frisch		Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Auberginen	in Scheiben	100	15-20	gelocht	2
Bohnen		100	35-45	gelocht	2
Broccoli	Röschen mit Stiel	100	25-30	gelocht	2
Broccoli	Röschen ohne Stiel	100	15-20	gelocht	2
Blumenkohl	Röschen	100	25-30	gelocht	2
Blumenkohl	ganzer Kopf	100	40-45	gelocht	1
Erbsen		100	30-35	gelocht	2
Fenchel	in Streifen	100	15-20	gelocht	2
Fenchel	halbiert	100	20-30	gelocht	2
Kartoffeln m. Schale	ganz, sehr klein	100	20-25	gelocht	2
Kartoffeln m. Schale	ganz, sehr dick	100	45-50	gelocht	2
Kartoffeln o. Schale	in Stücken	100	20-25	gelocht	2
Kohlraben	in Stifte	100	20-25	gelocht	2
Kaiserschoten		100	15-20	gelocht	2
Karotten	in Scheiben	100	25-30	gelocht	2
Maiskolben		100	50-60	gelocht	2
Paprikaschoten	in Streifen	100	12-15	gelocht	2
Peperoni		100	12-15	gelocht	2
Pilze	in Viertel	100	12-15	gelocht	2
Porree	in Scheiben	100	10-12	gelocht	2
Rosenkohl		100	25-35	gelocht	2
Sellerie	in Streifen	100	15-20	gelocht	2
Spargel		100	20-35	gelocht	2
Spinat		100	12-15	gelocht	2
Stangensellerie		100	25-30	gelocht	2
Zucchini	in Scheiben	100	12-18	gelocht	2

Klöße

Klöße	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Buchteln	100	20-30	ungelocht	2
Dampfnudeln	100	15-20	ungelocht	2
Hefeklöße	100	15-25	ungelocht	2
Semmelknödel	100	20-25	ungelocht	2
Serviettenkloß	100	25-30	ungelocht	2

Tabellen und Tipps

Desserts

Desserts	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Apfelkompott	500-1500 g	100	15-25	ungelocht	2
Birnenkompott	500-1500 g	100	25-30	ungelocht	2
Crème Brülèe		80	20-25	Rost-Schälchen	2
Crème Caramel		80	25-30	Rost-Schälchen	2
Joghurt		40	4-6 Std..	Rost-Schälchen	2
Pfirsichkompott	500-1500 g	100	15-20	ungelocht	2

Obst (Sterilisieren/Einkochen)

Obst	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Birnen	4-6 1l-Gläser	100	30-35	Rost	1
Kirschen	4-6 1l-Gläser	80	30-35	Rost	1
Pfirsiche	4-6 1l-Gläser	90	30-35	Rost	1
Pflaumen	4-6 1l-Gläser	90	30-35	Rost	1

Regenerieren

Aufwärmen	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Tellergerichte	1-2	100	12-15	Rost	2
Tellergerichte	3-4	100	15-20	Rost	2
Fertiggerichte		100	15-20	Rost	2

Blanchieren

Gemüse	Menge	Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
z.B. Bohnen, Porree	1000-1200 g	100	10-12	gelocht.	2
Grünkohl	1000-2000 g	100	12-16	gelocht	2
Wirsingblätter	10-20	100	12-15	gelocht	2
Weißkohl, ganz	2000-2500 g	100	30-45	gelocht	1
Tomaten, abziehen		80	12	Rost	2

Tabellen und Tipps

Auftauen

Gemüse/ Beilagen		Temperatur ºC	Garzeit Min.	Behälter	Leiste v.u.
Broccoli	Röschen mit Stiel	100	15-20	gelocht	2
Balkangemüse		100	15-20	gelocht	2
Blattspinat	Portionsstücke	100	10-15	ungelocht	2
Blumenkohl	Röschen	100	15-20	gelocht	2
Erbsen		100	15-25	gelocht	2
Grünkohl	dicker Block	100	25-35	ungelocht	2
Karotten	in Scheiben	100	15-20	gelocht	2
Rosenkohl		100	20-25	gelocht	2
Spargel		100	25-30	gelocht	2
Fertiggerichte		100	nach Bedarf	Rost	2
Brot		100	10-25	Rost	2
Reis		100	15-25	ungelocht	2
Linsen		100	15-20	ungelocht	2
Nudeln		100	15-20	ungelocht	2

Garen auf 2 Ebenen

Einige Hinweise:

Beim Garen auf zwei Ebenen gehört der Rost immer auf die 2. oder 3. Einschubleiste von unten.

Darauf können handelsübliche Gefäße aus Porzellan, Jena-Glas oder aus Edelstahl gestellt werden.

In die 1. Leiste von unten wird der ungelochte- oder gelochte Garbehälter eingeschoben.

Es kann auch mit zwei Rosten gegart werden.

Unterschiedliche Garzeiten werden so reguliert:

Lebensmittel die eine längere Garzeit benötigen gehören in den oberen Bereich des Dämpfers. Lebensmittel mit kürzeren Garzeiten werden dann in die 1. Leiste von unten eingeschoben.

Ein Beispiel: Gemüse, Kartoffeln und Fisch.

Gemüse und Kartoffeln in beliebigen Gefäßen auf den Rost in die 2. oder 3. Leiste von unten in das Gerät schieben.

Den Fisch auf die 1. Leiste von unten einschieben.

Wird für den Fisch der gelochte Garbehälter benutzt, muss der ungelochte Garbehälter auf den Boden des Gerätes gestellt werden um den herunter tropfenden Fischsud aufzufangen. Das Gerät bleibt so sauber.

Garzeit: Gemüse und Kartoffeln 25-35 Min.

Garzeit: Fisch – je nach Sorte – 15-25 Min.

Eingestellt wird die längste Garzeit, durch die unterschiedlichen Ebenen wird das Essen zur gleichen Zeit fertig, ohne dass etwas übergart ist.

Wartung

Reinigung des Innenraums

Keinesfalls scheuernde Reinigungsmittel wie Allzweck-Scheuerschwämme, Metallwatte usw. benutzen. Dadurch wird die Oberfläche beschädigt.

Reinigen Sie das Garraum im warmen Zustand mit einem feuchteten Lappen Anschließend trocken wischen

Zur einfacheren Reinigung, können die Seitengitter herausgenommen werde. (siehe folgende Kapitel).

Seitengitter aushängen

Die Rändelmutter 1 vorne an den Auflagegittern im Gegenuhrzeigersinn losschrauben.

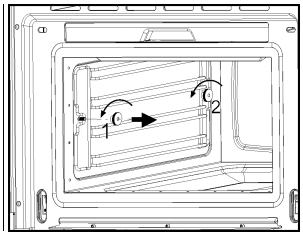

Die Gerätetür herausnehmen

1. Öffnen Sie die Tür so weit wie möglich.

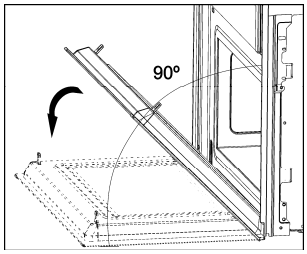

2. Fügen Sie zwei Bolzen in die Löcher derTürangeln ein.

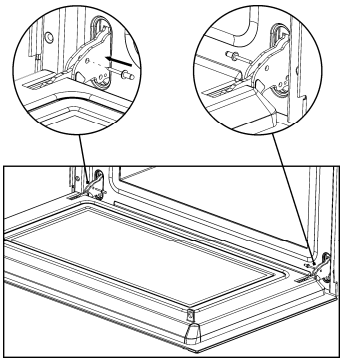

3. Die Tür mit beiden Händen seitlich fassen und halb schließen. Heben Sie die Tür leicht an und

Die Rändelmutter 2 hinten an den Auflagegittern im Gegenuhrzeigersinn leicht losschrauben. Die Rändelmutter nicht herausnehmen.

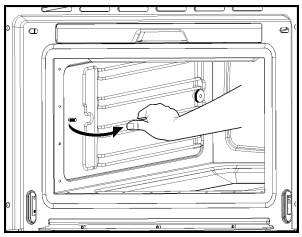

Auflagegitter etwas nach vorne ziehen und herausnehmen.

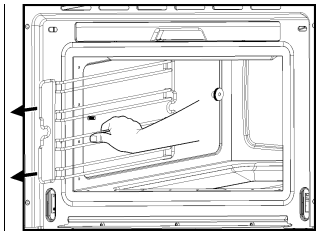

Zum Einbau Auflagegitter in die Rändelmutter 2 einschieben.

Die Rändelmuttern 1 im Uhrzeigersinn bis zum Anschlag eindrehen, die Rändelmutter 2 festschrauben.
ziehen Sie die Scharniere nach vorne aus den Türöffnungen.

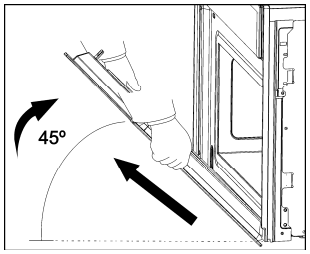

4. Zum Einsetzen die Gerätetür mit beiden Händen seitlich fassen und die Scharniere in die Öffnungen am Gerät einschieben.

5. Öffnen Sie die Gerätetür so weit wie möglich und ziehen Sie die Bolzen heraus.

Wartung

Entkalkung

Bei jeder Dampferzeugung lagert sich, abhängig von der örtlichen Wasserhärte (d.h. vom Kalkgehalt des Wassers), Kalk im Dampferzeuger ab.

Das Entkalkungsintervall ist von der jeweiligen Wasserhärte und der Häufigkeit der Benutzung abhängig. Bei 4x30 Minuten Dämpfen pro Woche, muss je nach Wasserhärte ungefähr wie folgt entkalkt werden:

Wasserhärte	Entkalken nach
Sehr weich	18 Monate
Mittel	9 Monate
Sehr hart	6 Monate

Das Gerät entdeckt automatisch, wann das Entkalken notwendig ist. Es leuchtet die Entkalkungsleuchte. Falls das Entkalken nicht durchgeführt wird, blinkt die Leuchte. Sollten Sie nach weiteren Dämpfvorgängen das Gerät nicht entkalken, wird der Betrieb blockiert. Der Hinweis „CAL“ auf der Anzeige und die Leuchte blinken.

WICHTIGE ANMERKUNG: Wird das Gerät nicht entkalkt, muss mit einer Beeinträchtigung der Gerätefunktion bzw. Schädigung des Gerätes gerechnet werden.

Drei Betriebsstunden bevor Ende, erscheint die Entkalkungsleuchte. Falls die Entkalkung in dieser bestimmten Zeit nicht durchgeführt wird, fängt dieselbe an zu blinken. Bei einer nicht Entkalkung in den darauf folgenden drei Betriebsstunden, führt es zu einen blockieren des Betriebssystems.

Geeignetes Entkalkungsmittel

Verwenden Sie zum Entkalken das Entkalkungsmittel „durgol“.

Dieses Mittel ermöglicht Ihnen ein professionelles und schonendes Entkalken Ihres Gerätes. Erhältlich beim Kundendienst.

Achtung! Benutzen Sie nicht Essig oder Essigreiniger, weil sie den inneren Wasserkreislauf beschädigen können.

Herkömmliche Entkalkungsmittel sind nicht geeignet, sie können Schaumbildende Zusätze enthalten.

Wartung

Entkalkungsprozess

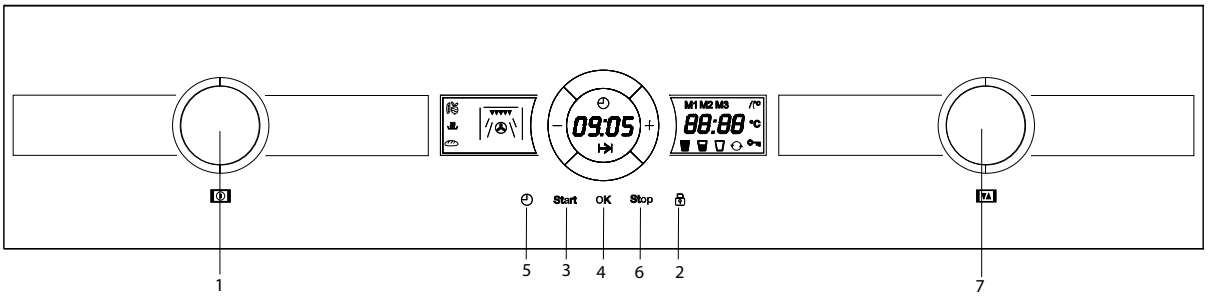

Achtung: Aus Sicherheitsgründen kann der Entkalkungsprozess nicht unterbrochen werden.

Das Gerät kann mit geöffneter oder geschlossener Tür entkalkt werden. Vor dem Entkalkungsprozess muss das Gerät im ausgeschaltetem Bereich sein Der Entkalkungsprozess wird wie folgt durchgeführt

1. Drücken Sie die „-„ und „+“ tasten 5 Sekunden lang die Auf der Anzeige erscheint „**CAL**“ und ein Signal ertönt.
2. Drücken Sie die „Start“ taste (3) um den Entkalkungsprozess zu starten.
3. Die Anzeige ze*i*gt „**0.5L**“, den Wassertank entnehmen.
4. 0,5 Liter Entkalkungslösung in den Wassertank geben und wieder bis zur Rastung über den Innenraum einschieben (siehe folgenden Abschnitt).
5. Drücken Sie die „Start“ taste (3). Der Entkalkungsprozess starten und dauert circa 30 min.
6. Wenn auf dem Entkalkungsdisplay „**1.0L**“ blinkend dargestellt wird und ein Signal ertönt, muss der Wassertank entfernt und entleert werden.
7. Den Wassertank mit 1,0 Liter kalten Wasser füllen und wieder bis zur Rastung über den Innenraum einschieben.
8. Drücken Sie die „Start“ taste (3). Die erste Spülung beginnt.
9. Wenn auf dem Entkalkungsdisplay wieder „**1.0L**“ blinkend dargestellt wird und ein neues Signal ertönt, muss der Wassertank entfernt und entleert werden.
10. Den Wassertank mit 1,0 Liter kalten Wasser füllen und wieder platzieren.
12. Drücken Sie die „Start“ taste (3). Die zweite Spülung beginnt.
13. Wenn die Spülung zu Ende ist, steht auf der Anzeige „**End**“.
14. Den Wassertank entfernen, entleeren und trocknen

Reinigung und Wartung des Geräts

Achtung! Die Reinigung muss an dem von der Stromversorgung getrennten Gerät durchgeführt werden. Ziehen Sie den Stecker aus der Steckdose oder schalten Sie den Stromversorgungskreis des Gerätes ab.

Benutzen Sie keine aggressiven Reinigungs- oder Scheuermittel, keine kratzenden Scheuertücher noch spitze Gegenstände, denn es können Flecken entstehen.

Verwenden Sie keine Hochdruck- oder Dampfstrahlreinigungsgeräte.

Stirnseite

Es reicht, das Gerät mit einem feuchten Lappen zu reinigen. Geben Sie, falls er sehr verschmutzt sein sollte, einige Tropfen Geschirrspülmittel ins Waschwasser. Wischen Sie danach das Gerät mit einem trockenen Lappen ab.

Benutzen Sie **bei Geräten mit einer Aluminiumvorderseite** ein mildes Glasreinigungsmittel und einen weichen, fusselfreien Lappen. Wischen Sie diese in horizontaler Richtung ab, ohne Druck auf die Oberfläche auszuüben.

Entfernen Sie Kalk-, Fett-, Stärke- und Eisweißflecken umgehend. Unter diesen Flecken kann es zur Korrosion kommen.

Vermeiden Sie das Eindringen von Wasser ins Geräteinnere.

Garraum

Reinigen Sie nach jeder Nutzung die Innenwände mit einem feuchten Lappen. Lassen Sie die Tür geöffnet , so dass der Garraum abkühlen und austrocknen kann.

Nutzen Sie ein nicht aggressives Reinigungsmittel, um hartnäckigere Verunreinigungen zu entfernen. **Verwenden Sie weder Backofensprays noch sonstige aggressive bzw. scheuernde Reinigungsmittel.**

Halten Sie die Tür und die Vorderseite des Gerätes stets sehr sauber, um dessen einwandfreie Funktionsweise zu gewährleisten.

Verhindern Sie das Eindringen von Wasser in die Belüftungslöcher

Die Glasabdeckung der Lampe befindet sich an der Decke des Gerätes und kann zur Reinigung leicht abgenommen werden. Schrauben Sie diese dazu ab und reinigen Sie diese mit Wasser und Geschirrspülmittel.

Zubehör

Reinigen Sie das Zubehör nach jeder Benutzung. Falls es sehr verschmutzt ist, weichen Sie es zuerst ein, und benutzen Sie dann eine Bürste und einen Schwamm. Das Zubehör kann in einer Geschirrspülmaschine gereinigt werden.

Was ist im Falle einer Funktionsstörung zu tun?

ACHTUNG! Jegliche Art von Reparatur darf nur von spezialisierten Fachleuten ausgeführt werden. Jeder Eingriff, der durch nicht vom Hersteller autorisierte Personen vorgenommen wird, ist gefährlich.

Folgende Probleme können behoben werden, ohne den Kundendienst zu benachrichtigen:

- **Die Anzeige ist aus!** Überprüfen, ob:
  - die Stundenanzeige ausgeschaltet wurde (siehe Abschnitt zu den Grundeinstellungen).
- **Es geschieht nichts, wenn die Tasten gedrückt werden!** Überprüfen, ob:
  - die Sicherheitsverriegelung aktiviert ist (siehe Abschnitt zu den Grundeinstellungen).
- **Das Gerät funktioniert nicht!** Überprüfen, ob:
  - der Stecker richtig an die Steckdose angeschlossen ist,
  - der Stromversorgungskreis des Gerätes eingeschaltet ist.
- **Während des Betriebs sind Geräusche zu hören!**
  - Es handelt sich um Betriebsgeräusche die während der gesamten Dämpfzeit auftreten können z.B. durch das Wasserpumpen beim Dampferzeuger.
  - Diese Geräusche sind normal, es gibt keine Probleme.
- **Die Nahrungsmittel werden nicht heiß oder werden sehr langsam heiß!** Überprüfen, ob:
  - Sie die richtige Temperatur und Betriebsdauer gewählt haben,
  - Sie eine größere oder kältere Nahrungsmittelmenge als gewöhnlich in das Innere des Gerätes gegeben haben.
- **Falls auf der Anzeige "Err_" erscheint , bitte den Kundendienst kontaktieren.**
- **Nach Beendigung eines Kochvorgangs ist ein Geräusch zu hören!** Das ist kein Problem.
  - Der Kühlventilator läuft eine gewisse Zeit lang nach. Wenn die Temperatur genügend zurückgegangen ist, schaltet sich der Ventilator ab.
- **Das Gerät funktioniert, die Innenbeleuchtung geht aber nicht an!**
  - Falls alle Funktionen richtig ablaufen, ist wahrscheinlich die Lampe durchgebrannt. Sie können das Gerät weiterhin benutzen.

Lampenwechsel

Gehen Sie folgendermaßen vor, um die Lampe auszutauschen:

- Trennen Sie das Gerät von der Stromversorgung. Ziehen Sie den Stecker aus der Steckdose bzw. unterbrechen Sie den Stromversorgungskreis des Gerätes.
- Schrauben Sie den Glasdeckel von der Lampe **(1)** ab.
- Nehmen Sie die Halogenlampe heraus **(2)**. **Achtung! Die Lampe kann sehr heiß sein.**
- Setzen Sie eine neue E14 230-240V / 15W Lampe. Befolgen Sie die Anweisungen des Lampenherstellers.
- Schrauben Sie den Glasdeckel der Lampe ein **(1)**.
- Schließen Sie das Gerät wieder an die Stromversorgung an.

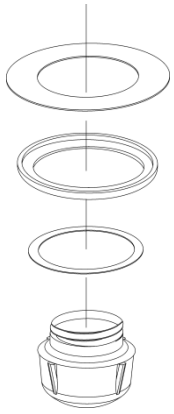

Technische Eigenschaften

Anzeigen

Display	Beschreibung
Entkalkung	
1	Weiches Wasser.
2	Mittelhartes Wasser.
3	Hartes Wasser.
CAL	Gerät muss Entkalkt werden.
	Blinkend, Entkalkung beginnt.
0.5L	0,5 Liter Entkalkungslösung in den Wassertank geben.
1.0L	1,0 Liter kaltes Wasser zum Spülen in den Wassertank geben.
Wassertank	
rES	Hinweis auf das Fehlen des Wassertanks.
dEP	Der Wassertank muss entfernt, entleert und wieder plaziert werden.
Dampf Reduktion	
VAP	Hinweis auf den laufenden Dampfabbauprozess.
PUMP	Hinweis auf den Eingang des kalten Wassers im Kessel und Abfluss des heißen Wassers zum Wassertank.
FULL	Der Wassertank muss entfernt, entleert und wieder plaziert werden.
System Warnungen	
LAMP	Beschädigte Lampe.
HOt	Die Temperatur im PCB ist zu hoch.
Err1	Fehler im Drucksensor.
Err2	Fehler im Temperatursensor der Ofen.
Err3	Fehler im Temperatursensor der Kessel.
Err4	Fehler in den Ebenedetektoren des Kessels.
Err6	Fehler in den Wasserpumpe.

Spezifikation

- Wechselspannung ..... (siehe Typenschild)
- Geforderte Leistung ..... 1500 W
- Außenabmessungen (BxHxT). ..... 595 x 455 x 472 mm
- Abmessungen des Garraumes (BxHxT). ..... 420 x 210 x 390 mm
- Fassungsvermögen des Ofens. ..... 35 l
- Gewicht ..... 32 kg

Wir bitten Sie, die in diesem Heft enthaltenen Anweisungen aufmerksam durchzulesen, die helfen Ihnen, bei der Nutzung Ihres Dampfgarers gute Ergebnisse zu erzielen.

BEWAHREN SIE DIE DOKUMENTATION DIESES GERÄTES AUF, UM KÜNFTIG IN IHR NACHSCHLAGEN ZU KÖNNEN.

Halten Sie die Gebrauchsanleitung immer griffbereit. Falls Sie das Gerät Dritten überlassen, stellen Sie ihnen auch die entsprechende Betriebsanleitung zur Verfügung!

Hinweise zum Umweltschutz

Entsorgung der Verpackung

Die Verpackung ist mit einem Grünen Punkt gekennzeichnet.

Benutzen Sie geeignete Behältnisse, um alle Verpackungsmaterialien, wie Pappe, Styropor und Folien, zu entsorgen. Auf diese Weise wird die Wiederverwertung der Verpackungsmaterialien gewährleistet.

Entsorgung von stillgelegten Geräten

Die europäische Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte (WEEE) sieht vor, dass die elektrischen Haushaltgeräte nicht im normalen Abfallfluss des festen Stadtmülls entsorgt werden dürfen.

Die außer Betrieb gesetzten Geräte müssen getrennt abgeholt werden, um den Anteil der Rückgewinnung und Wiederverwendung der Werkstoffe, aus denen sie bestehen, zu optimieren und um potentielle Schäden für die Gesundheit der Menschen und die Umwelt zu vermeiden. Das Symbol, welches aus einem mit einem Kreuz durchgestrichenen Müllcontainer besteht, ist auf sämtlichen Erzeugnissen anzubringen, um so an die Verpflichtung der separaten Abholung zu erinnern.

Die Verbraucher haben sich mit den lokalen Behörden bzw. den Verkaufsstellen in Verbindung zu setzen, um Informationen über den Ort einzuholen, der zur Lagerung der alten elektrischen Haushaltsgeräte geeignet ist.

Machen Sie Ihr Gerät unbrauchbar, bevor Sie es entsorgen. Ziehen Sie das Netzkabel heraus, schneiden Sie es ab und entsorgen Sie es.

Installationsanleitung

Vor der Installation

Überprüfen Sie, dass die Versorgungsspannung, die auf dem Typenschild angegeben ist, mit Ihrer Netzspannung übereinstimmt.

Öffnen Sie die Tür und entnehmen Sie **alle Zubehörteile** sowie das Verpackungsmaterial.

Achtung! Die Vorderseite des Gerätes kann mit einer **Schutzfolie** versehen sein. Ziehen Sie diese Folie vor der ersten Benutzung des Gerätes vorsichtig ab, indem Sie an deren Unterseite beginnen.

Vergewissern Sie sich, dass das Gerät nicht beschädigt ist. Überprüfen Sie, ob die Tür richtig schließt und ob die Innenseite der Tür sowie die Stirnseite des Innenraumes nicht beschädigt sind. Benachrichtigen Sie den Kundendienst im Falle von vorhandenen Schäden. Im Falle von vorhandenen Schäden, Benachrichtigen Sie den Kundendienst. Die Telefonnummer finden Sie auf der Rückseite dieses Heftes.

BENUTZEN SIE DAS GERÄT NICHT, falls das Netzkabel oder der Stecker beschädigt ist, falls das Gerät nicht richtig funktioniert bzw. wenn es Schäden erlitten hat oder heruntergefallen ist. Setzen Sie sich gegebenenfalls mit dem Kundendienst in Verbindung. Setzen Sie sich gegebenenfalls mit dem Kundendienst in Verbindung. Telefonnummer auf der Rückseite dieses Heftes.

Stellen Sie das Gerät auf eine ebene und stabile Fläche. Das Gerät darf nicht in der Nähe von Heizelementen, Radios und Fernsehgeräten aufgestellt werden.

Vergewissern Sie sich während der Installation, dass das Netzkabel nicht mit Feuchtigkeit, scharfkantigen Gegenständen und der Rückseite des Gerätes in Berührung kommt, denn die hohen Temperaturen können das Kabel beschädigen.

Achtung: Nach der Aufstellung des Gerätes ist der Zugang zum Stecker zu gewährleisten.

Nach der Installation

Das Gerät ist mit einem Netzkabel und einem Stecker für Einphasenstrom ausgestattet, 230-240V ~ 50Hz.

Im Falle eines Daueranschlusses ist das Gerät von einem qualifizierten Techniker zu installieren. In diesem Falle hat der Anschluss an einen Stromkreis mit einem Unterbrecher für sämtliche Pole, mit einem Mindestabstand von 3 mm zwischen den Kontakten, zu erfolgen.

ACHTUNG: DAS GERÄT MUSS UNBEDINGT GEERDET WERDEN.

Der Hersteller und die Wiederverkäufer lehnen jegliche Haftung für eventuelle Schäden **ab**, die Personen, Tieren oder Sachen zugefügt werden, falls die Nichtbeachtung der vorliegenden Installationsanleitung festgestellt wird.

Das Gerät funktioniert nur, wenn die Tür richtig geschlossen ist.

Säubern Sie vor der ersten Benutzung das Geräteinnere und die Zubehörteile gemäß den Hinweisen zur Reinigung unter dem Punkt „Reinigung und Wartung des Gerätes".

Während der Installation sind die getrennt mitgelieferten Anleitungen zu befolgen.

Installation /Einbau

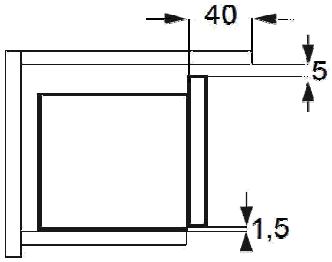

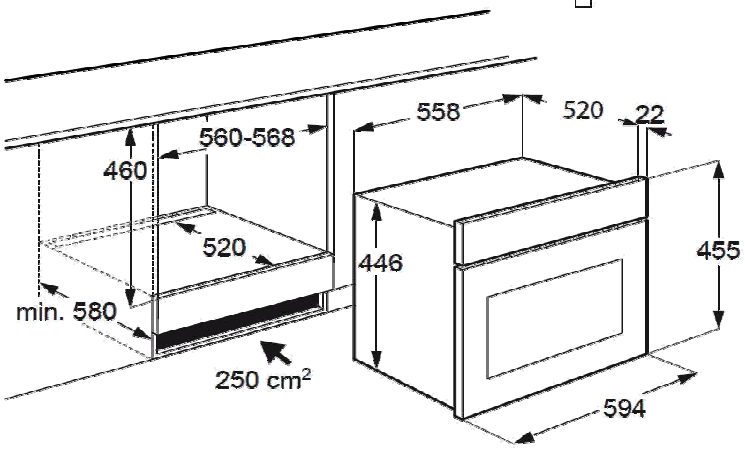

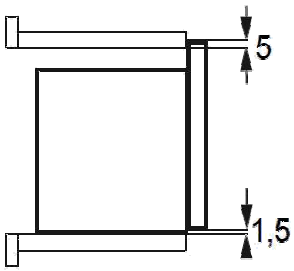

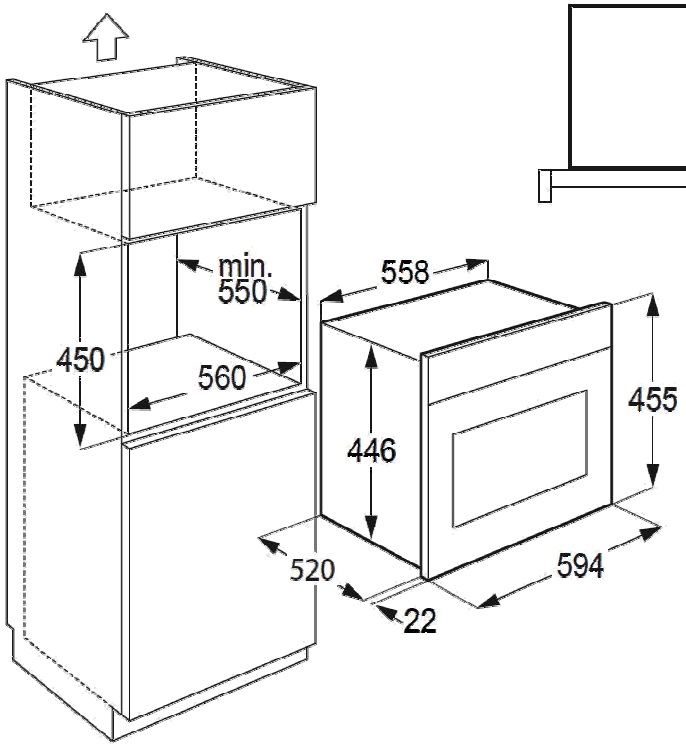

ampfgarer in die Nische
ben und entsprechend
en.

der öffnen und das Gerät
len vier mitgelieferten
en am Küchenmöbel wie im
gestellt befestigen.

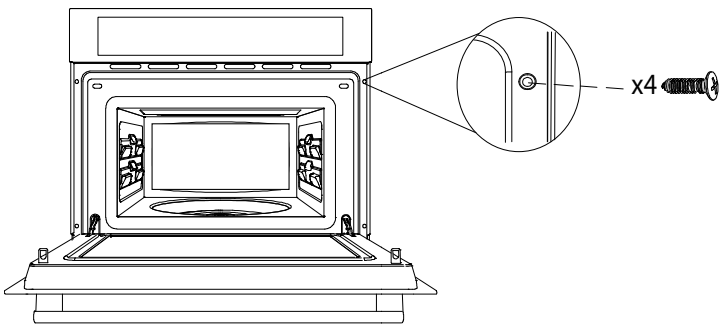

ven completely into the
and centre it.

or and fasten the appliance
abinet using the four screws
. Insert the screws through
holes.

Teka Subsidiaries

Country Subsidiary	Address	City	Phone
Austria Küppersbusch Austria	Eitnergasse, 13	1231 Wien	+43 18 668 022
Belgium Küppersbusch Belgium S.P.R.L.	Doomveld Industrie, Asse 3, No. 11 - Boite 7	1731 Zellik	+32 24 668 740
Bulgaria Teka Bulgaria EOOD	Blvd. “Tsarigradsko Shosse” 135	1784 Sofia	+359 29 768 330
Chile Teka Chile S.A.	Avd El Retiro Parque los Maitenes, 1237. Parque Enea	Pudahuel, Santiago de Chile	+ 56 24 386 000
China Teka International Trading (Shanghai) Co. Ltd.	6/F. Datong Business Center, No. 369 Fuxing Middle Rd.	200025 Shanghai	+86 2 153 076 901
Czech Republic Teka CZ S.R.O.	V Holesovickách, 593	182 00 Praha 8 - Liben	+420 284 691 940
Denmark Juvél A/S	Københavnsvej 222	DK-4600 Køge	+45 36 340 288
Ecuador Teka Ecuador S.A.	Parque Ind. California 2, Via a Daule Km 12	Guayaquil	+593 42 100 311
Germany Teka Küchentechnik GmbH	Sechsheldener Str. 122	35708 Haiger	+49 27 713 950
Great Britain Teka Products Ltd.	177 Milton Park	OX14 4SE Milton, Abingdon	+44 1 235 861 916
Greece Teka Hellas A.E.	Thesi Roupaki - Aspropyrgos	193 00 Athens	+30 2 109 760 283
Hungary Teka Hungary Kft.	Bajcsy Zsilinszky u. 53	1065 Budapest	+36 13 542 110
Indonesia PT Teka Buana	Jalan Menteng Raya, Kantor Taman A9 Unit A3	12950 Jakarta	+62 215 762 272
Malaysia Teka Küchentechnik (Malaysia) Sdn Bhd	10 Jalan Kartunis U1/47, Temasya Park, Off Glenmarie	40150 Shah Alam, Selangor Darul Ehsan	+60 376 201 600
Mexico Teka Mexicana S.A. de C.V.	Ferrocarril 200, Esquina Norte 29, Col. Moctezuma	15500 Mexico D.F.	+52 5 551 330 493
Morocco Teka Maroc S.A.	73, Bd. Slimane, Depôt 33, Route de Ain Sebaa	Casablanca	+212 22 674 462
Netherlands Teka B.V.	Wijkermeerstraat, 34	2131 HA Hoofddorp	+ 31 235 656 480
Norway Intra, A.S	Storsand	7563 Malvik	+47 73 980 100
Poland Teka Polska Sp. ZO.O.	ul. 3-go Maja 8 / A2	05-800 Pruszków	+48 227 383 270
Portugal Teka Portugal S.A.	Estrada da Mota - Apdo 533	3834-909 Ilhavo, Aveiro	+35 1 234 329 500
Romania S.C. Teka Küchentechnik Romania S.R.L.	Sevastopol str., no 24, 5th floor, of. 15	010992 Bucharest Sector 1	+40 212 334 450
Russia Teka Rus LLC	Barklaya str. 6, bld. 3, Barklay plaza center, office 402	121087 Moscow â˜™ Russia	+7 4 956 450 064
Singapore Teka Singapore PTE Ltd	Clemenceau Avenue, 83, 01-33/34 UE Square	239920 Singapore	+65 67 342 415
Spain Teka Industrial, S.A.	C/ Cajo,17	39011 Santander	+34 942 355 050
Sweden Intra Mölntorp AB	Säbyvägen, 8	734 93 Kolbäck	+46 22 040 300
Thailand Teka (Thailand) Co. Ltd.	364/8 Sri-Ayuttaya Road, Phayathai, Ratchatavee	10400 Bangkok	+66 -26 424 888
Turkey Teka Teknik Mutfak Aletleri Sanayi Ve	Büyükdere Cad. 24/13	80290 Mecidiyeköy, Istanbul	+90 2 122 883 134
Ukraine Teka Ukranie LLC	86-e, Bozhenko Str .2nd floor,4th entrance	03150 Kyiv	+380 444 960 680
United Arab Emirates Teka Middle East Fze	Building LOB 16, Office 417	P.O. Box 18251 Dubai	+971 48 872 912
United Arab Emirates Teka Küchentechnik U.A.E LLC	Bin Khedia Centre	P.O. Box 35142 Dubai	+971 42 833 047
Venezuela Teka Andina S.A.	Ctra. Petare-Santa Lucia, km 3 (El Limoncito)	1070 Caracas	+58 2 122 912 821
Vietnam TEKA Vietnam Co., Ltd.	803 Dai Minh Convention Tower, 8th Floor	77 Hoang Van Thai, District 7, Ho Chi Minh	+84 854 160 646